C1048

14290

M37
Engine cooling fan motor

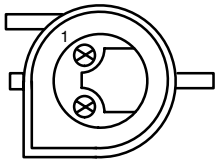

F02395

Pin	Circuit	Circuit Function
1	228 (DB)	Engine cooling fan relay, switched output
2	57 (BK)	Ground

C1051

14290

K4
Fuel pump relay

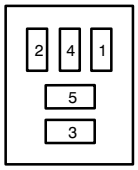

F05064

Pin	Circuit	Circuit Function
1	926 (LB/OG)	Fuel pump relay, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)
3	1059 (LB/OG)	Voltage supplied at all times (overload protected)
4	–	not used
5	238 (DG/YE)	Fuel pump relay, switched power, output

C1055

14290

K45
Engine cooling fan relay

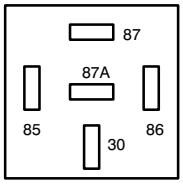

F05051

Pin	Circuit	Circuit Function
30	1153 (RD/BK)	Voltage supplied at all times (overload protected)
85	3702 (OG/WH)	Engine cooling fan relay, control
86	361 (RD)	Voltage supplied in Start and Run (overload protected)
87	228 (DB)	Engine cooling fan relay, switched output
87A	–	not used

C1061 (BN)

12B637

B227
Engine Coolant Temperature (ECT) sender

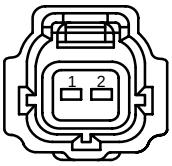

F02091

Pin	Circuit	Circuit Function
1	39 (RD/WH)	Engine Coolant Temperature (ECT) sender, input
2	570 (BK/WH)	Ground

C1064

12B637

B10
Engine Coolant Temperature (ECT) sensor

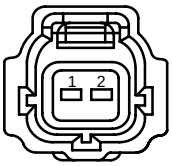

F02091

Pin	Circuit	Circuit Function
1	354 (LG/RD)	Engine Coolant Temperature (ECT) sensor, input
2	359 (GY/RD)	signal, return