C936 (BU)

12A522

B88
Heated Oxygen
Sensor (HO2S) #12
(9F472)

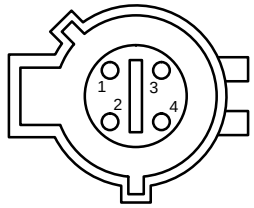

F04075

Pin	Circuit	Circuit function
1	15-RJ25 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
2	91S-RJ26 (BK/GN)	Ground, Switched
3	9-RJ26 (BN/GN)	Sensor signal return (reference/ground)
4	8-RJ26 (WH/GN)	Sensor signal

C937

14K138

Y18
Speaker, right front
(18808)



F02058

Pin	Circuit	Circuit function
1	8-MD28 (WH)	Sensor signal
2	10-MD28 (GY)	Signal 2 (Y–direction, reverse, downward)

C938

14A584

Y28
Speaker, left front
(18808)



F02058

Pin	Circuit	Circuit function
1	8-MD28 (WH)	Sensor signal
2	10-MD28 (GY)	Signal 2 (Y–direction, reverse, downward)

C939

14014

Y17
Speaker, left rear
(18808)



F02058

Pin	C1137	Circuit function
1	8-MD11 (WH/VT)	Sensor signal
2	10-MD11 (GY/WH)	Signal 2 (Y–direction, reverse, downward)