Ignition switch (11572)

Terminals

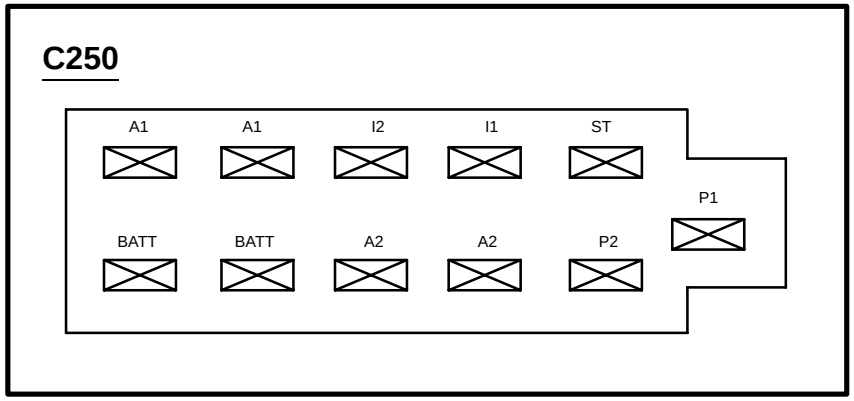

Component testing procedure

Circuit to test	Connect self–powered test light or ohm-meter to terminals	Move key to these positions	A good switch will indicate
Battery Power Circuit	BATT and BATT, A2 and A2	Off/Lock	Closed circuit
		Run	Closed circuit
		Start	Closed circuit
		Accessory	Closed circuit
Start power circuit	BATT and ST, BATT and I2 P1 and GND, P2 and GND	Off/Lock	Open circuit
		Run	Open circuit
		Start	Closed circuit
		Accessory	Open circuit
Run power circuit	BATT and A2, BATT and I1	Off/Lock	Open circuit
		Run	Closed circuit
		Start	Open circuit
		Accessory	Open circuit
Run/Acc power circuit	BATT and A1	Off/Lock	Open circuit
		Run	Closed circuit
		Start	Open circuit
		Accessory	Closed circuit