C18 (BK)

14401

P91
Central Junction
Box (CJB)

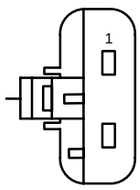

F02016

Pin	Circuit	Circuit Function
1	15-DA3 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
2	30-DA1 (RD)	Voltage supplied at all times (not overload protected)

C30 (BK)

14014

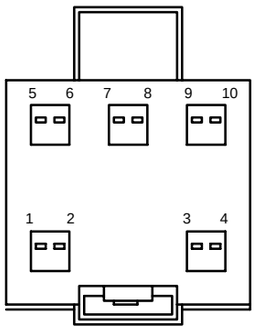

F10048

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	31S-GE52 (BK/RD)	Ground, switched
4	31-GE52 (BK)	Ground
5	15S-JA33 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
6	91S-JA33 (BK/BU)	Ground, switched
7	–	not used
8	–	not used
9	15S-JA37 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected), switched
10	91S-JA37 (BK/GN)	Ground, switched