C458 (BK)

14401

N49
Hazard flasher switch

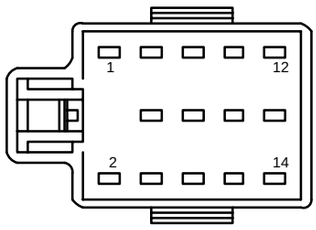

F14018

Pin	Circuit	Circuit Function
1	–	not used
2	29S-LG8A (OG)	Voltage supplied at all times (overload protected), switched
3	15S-LG2 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
4	31S-GL6 (BK/OG)	Ground, switched
5	29-LG43 (OG/WH)	Voltage supplied at all times (overload protected), switched
6	15S-LG1 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
7	15S-LG8 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
8	31S-LG8 (BK/OG)	Ground, switched
9	49S-LG12 (BU)	Pulsed power feed (overload protected), switched
10	91-LG8 (BN/BU)	Ground
11	49S-LG19 (BU/RD)	Pulsed power feed (overload protected), switched
12	49S-LG5 (BU/YE)	Pulsed power feed (overload protected), switched
	49S-LG15 M (BU/BK)	Pulsed power feed (overload protected), switched
13	29-LG8 (OG)	Voltage supplied at all times (overload protected)
14	49S-LG4 (BU/RD) +	Pulsed power feed (overload protected), switched
	49S-LG22 (BU/YE)	Pulsed power feed (overload protected), switched

C459 (GY)

14401

N282
Multifunction switch

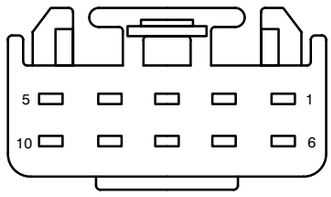

F10042

Pin	Circuit	Circuit Function
1	15S-LG1 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
2	15-LG27 (GN/BK)	Voltage, ignition switch in Start or Run (not overload protected)
3	15S-LG2 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
4	29-LG43 (OG/WH)	Voltage supplied at all times (overload protected), switched
5	91-LG43 (BK/WH)	Ground
6	15-LE14 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
7	15S-LE12 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected), switched
8	15S-LE14 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected), switched
9	15S-LE19 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched
10	–	not used