## C432 (BK)

### 14405

E9
Lamp assembly, left rear

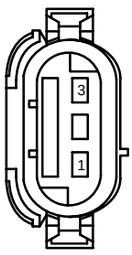


F03099

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31-LF23 (BK) | Ground |
| 2 | 29S-LF11 (OG/WH) | Voltage supplied at all times (overload protected), switched |
| 3 | 49S-LG12 (BU) | Pulsed power feed (overload protected), switched |
| | 15S-LG14A (GN/RD) | Voltage, ignition switch in Start or Run (not overload protected), switched |

## C435 (BN)

### 14405

E49
Turn lamp, left rear

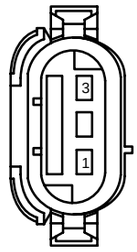


F03099

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31-LG12 (BK) | Ground |
| 2 | – | not used |
| 3 | 49S-LG12 (BU) | Pulsed power feed (overload protected), switched |

## C433 (BK)

### 14405

E10
Lamp assembly, right rear

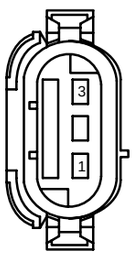


F03099

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31-LF24 (BK) | Ground |
| 2 | 29S-LF20 (OG) | Voltage supplied at all times (overload protected), switched |
| 3 | 49S-LG19 (BU/RD) | Pulsed power feed (overload protected), switched |

## C436 (BN)

### 14405

E48
Turn lamp, right rear

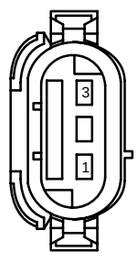


F03099

| Pin | Circuit | Circuit Function |
|---|---|---|
| 1 | 31-LG19 (BK) | Ground |
| 2 | – | not used |
| 3 | 49S-LG19 (BU/RD) | Pulsed power feed (overload protected), switched |