## C1127

**13105**

Parking lamp, right front

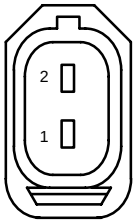


F02108

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 14 (BN) | Power, Exterior lamps |

## C1189

**12B637**

Throttle Position Sensor (TPS) (9B989)

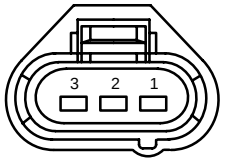


F03171

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 351 (BN/WH) | Reference, voltage |
| 2 | 355 (GY/WH) | Throttle Position Sensor (TPS) (9B989), input |
| 3 | 359 (GY/RD) | signal, return |

## C1159

**14290**

Engine compartment lamp

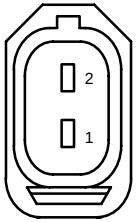


F02108

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 207 (YE/RD) | Engine compartment lamp – |
| 2 | 705 (LG/OG) | Battery saver, feed |

## C1196

**12B637**

Ignition transformer capacitor

F01031

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 16 (RD/LG) | Voltage supplied in Start and Run (overload protected) |

## C1179

**14290**

Air suspension compressor assembly

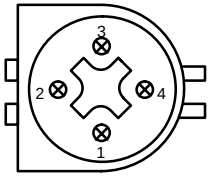


F04213

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | 57 (BK) | Ground |
| 3 | 421 (PK) | Air suspension compressor assembly, to, Air suspension module (3C142) |
| 4 | 538 (GY/RD) | Air suspension compressor relay, switched output |