C3016

14A005

N421
Power seat switch, left

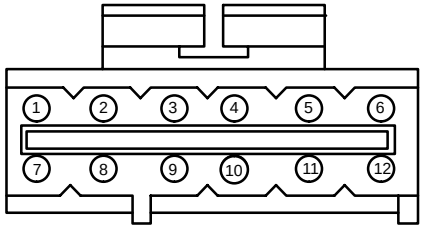

F12019

Pin	Circuit	Circuit function
1	982 (YE/LG)	Rear height motor, Down
2	983 (RD/LG)	Rear height motor, Up
3	–	not used
4	919 (GY/BK)	Seat regulator feed, Up/Down Circuit
5	918 (GY)	Seat regulator feed, Up/Down Circuit
6	979 (RD/LB)	Front height motor, Down
7	490 (RD)	Voltage supplied at all times (overload protected)
8	981 (RD/WH)	Fwd/Rwd motor, Forward
9	–	not used
10	980 (YE/WH)	Fwd/Rwd motor, Rearward
11	978 (YE/LB)	Front height motor, Up
12	57 (BK)	Ground

C3032

14A005

N488
Climate controlled seat switch, driver side

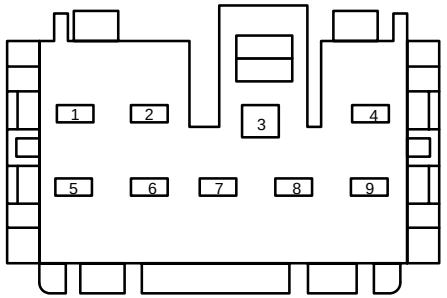

F09035

Pin	Circuit	Circuit function
1	–	not used
2	1040 (RD/BK)	Voltage in Run (overload protected)
3	–	not used
4	–	not used
5	57 (BK)	Ground
6	1020 (DG/VT)	Climate controlled seat module
7	461 (OG)	Electronic Automatic Temperature Control (EATC) module (19980), to, Heated seat module, driver side front
8	1018 (LG/OG)	Heated seat switch, driver side, Temperature +
9	1019 (TN/LB)	Heated seat switch, driver side, Temperature –