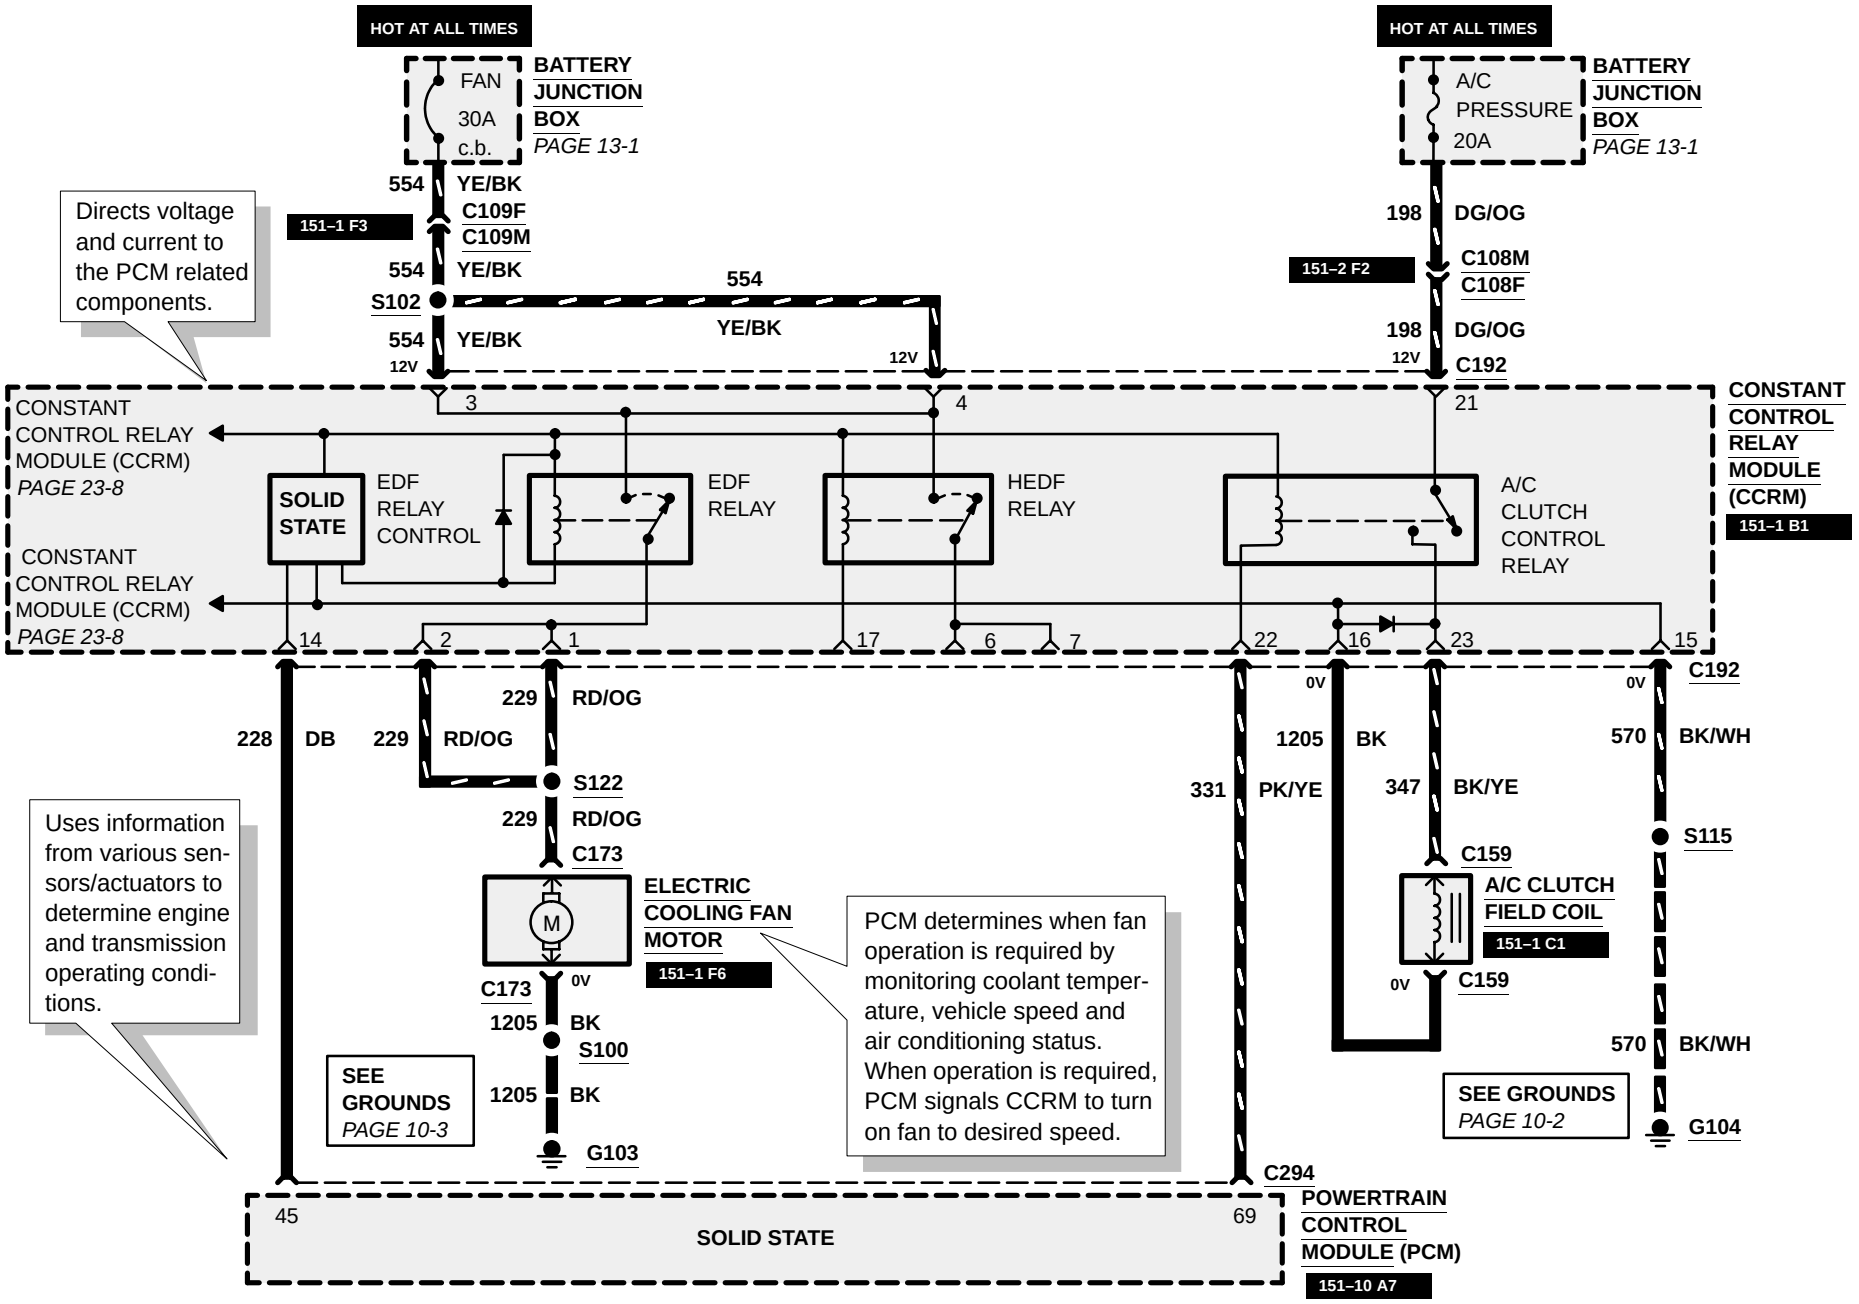
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-1
FAN
30A
c.b.
554 YE/BK
C109F
C109M
151–1 F3
554 YE/BK
S102
554 YE/BK
554 YE/BK
12V
12V
Directs voltage and current to the PCM related components.
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-1
A/C PRESSURE
20A
198 DG/OG
151–2 F2
C108M
C108F
198 DG/OG
12V
C192
CONSTANT CONTROL RELAY MODULE (CCRM)
PAGE 23-8
SOLID STATE
EDF RELAY CONTROL
EDF RELAY
HEDF RELAY
A/C CLUTCH CONTROL RELAY
CONSTANT CONTROL RELAY MODULE (CCRM)
PAGE 23-8
CONSTANT CONTROL RELAY MODULE (CCRM)
151–1 B1
3
4
21
14
2
1
17
6
7
22
16
23
15
228 DB
229 RD/OG
229 RD/OG
S122
229 RD/OG
C173
M
ELECTRIC COOLING FAN MOTOR
151–1 F6
C173
0V
1205 BK
S100
1205 BK
G103
SEE GROUNDS
PAGE 10-3
Uses information from various sensors/actuators to determine engine and transmission operating conditions.
PCM determines when fan operation is required by monitoring coolant temperature, vehicle speed and air conditioning status. When operation is required, PCM signals CCRM to turn on fan to desired speed.
0V
1205 BK
331 PK/YE
347 BK/YE
C159
A/C CLUTCH FIELD COIL
151–1 C1
0V
C159
0V
C192
570 BK/WH
S115
570 BK/WH
G104
SEE GROUNDS
PAGE 10-2
C294
45
69
SOLID STATE
POWERTRAIN CONTROL MODULE (PCM)
151–10 A7