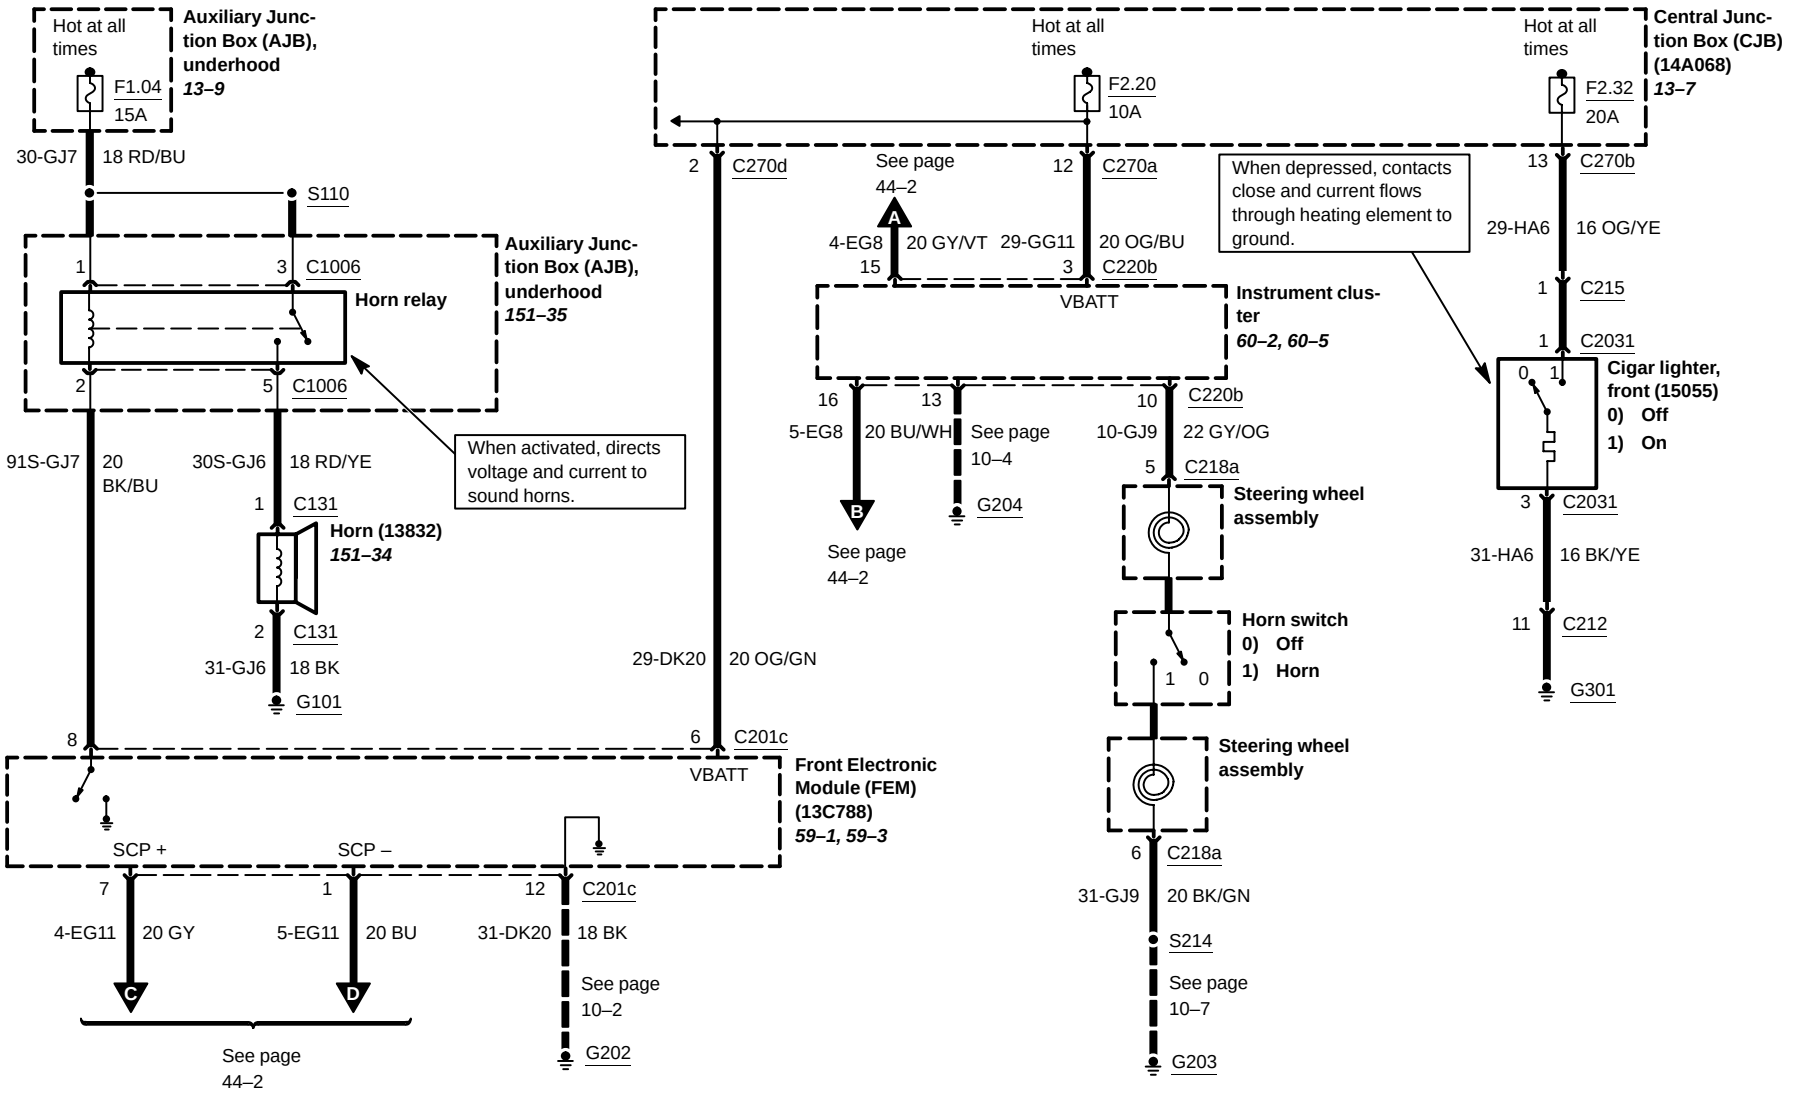
Hot at all times
F1.04
15A
Auxiliary Junction Box (AJB), underhood
13–9
30-GJ7
18 RD/BU
S110
1
3
C1006
Horn relay
Auxiliary Junction Box (AJB), underhood
151–35
2
5
C1006
When activated, directs voltage and current to sound horns.
91S-GJ7
20 BK/BU
30S-GJ6
18 RD/YE
1
C131
Horn (13832)
151–34
2
C131
31-GJ6
18 BK
G101
8
6
C201c
VBATT
Front Electronic Module (FEM) (13C788)
59–1, 59–3
SCP +
SCP –
7
1
12
C201c
4-EG11
20 GY
5-EG11
20 BU
31-DK20
18 BK
See page 10–2
G202
C
D
See page 44–2
29-DK20
20 OG/GN
Hot at all times
F2.20
10A
2
C270d
See page 44–2
12
C270a
A
4-EG8
15
20 GY/VT
29-GG11
3
20 OG/BU
C220b
VBATT
Instrument cluster
60–2, 60–5
16
5-EG8
20 BU/WH
See page 10–4
G204
B
See page 44–2
13
10
C220b
10-GJ9
22 GY/OG
5
C218a
Steering wheel assembly
Horn switch
0) Off
1) Horn
1
0
Steering wheel assembly
6
C218a
31-GJ9
20 BK/GN
S214
See page 10–7
G203
When depressed, contacts close and current flows through heating element to ground.
Hot at all times
F2.32
20A
Central Junction Box (CJB) (14A068)
13–7
13
C270b
29-HA6
16 OG/YE
1
C215
1
C2031
0
1
Cigar lighter, front (15055)
0) Off
1) On
3
C2031
31-HA6
16 BK/YE
11
C212
G301