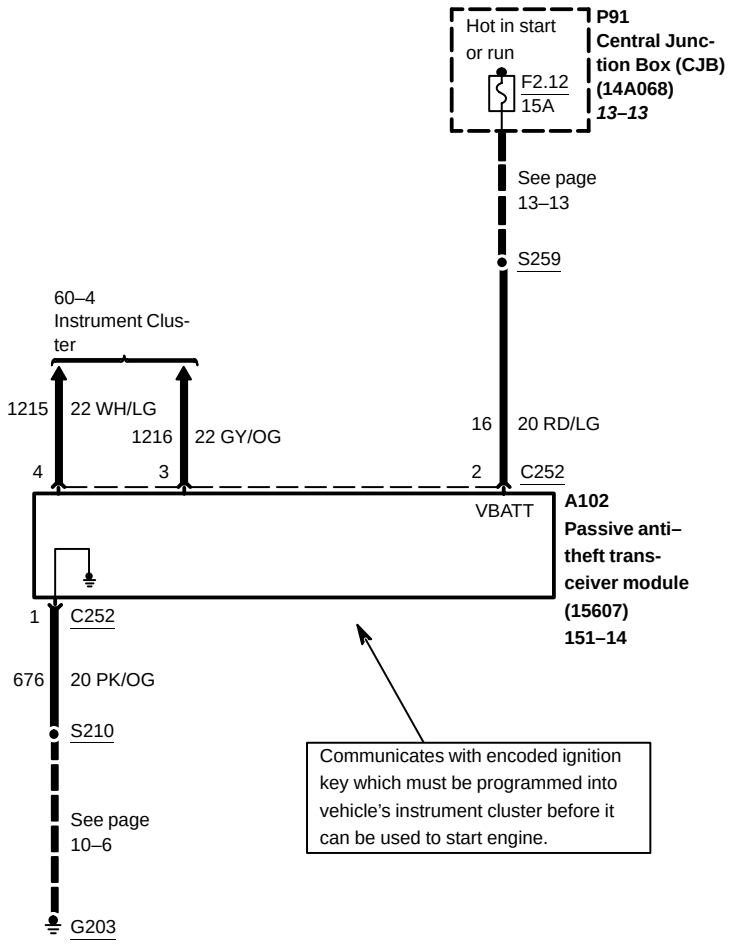
Hot in start or run
F2.12
15A
P91
Central Junction Box (CJB)
(14A068)
13–13
See page 13–13
S259
60–4
Instrument Cluster
1215
22 WH/LG
1216
22 GY/OG
16
20 RD/LG
4
3
2
C252
VBATT
A102
Passive anti–theft transceiver module
(15607)
151–14
1
C252
676
20 PK/OG
S210
See page 10–6
G203
Communicates with encoded ignition key which must be programmed into vehicle's instrument cluster before it can be used to start engine.