C218b (BN)

14401

Air bag sliding contact (14A664)

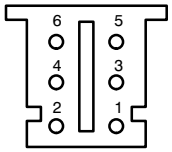

F06089

Pin	Circuit	Circuit function
1	151 (LB/BK)	Speed control switch, signal
2	1 (DB)	Horn relay, control
3	19 (LB/RD)	Instrument illumination, feed
4	848 (DG/OG)	Speed control switch, Signal return
5	57 (BK)	Ground
6	158 (BK/PK)	Key warning switch (11A127), input

C219 (BK)

@* @Harley @Davidson

14401

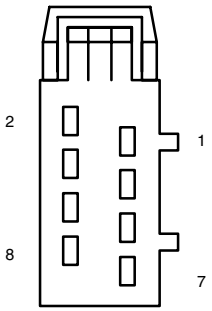

F08112

14A504

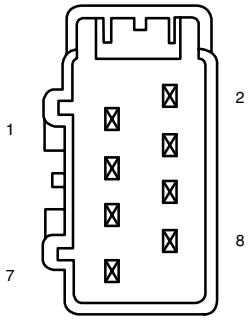

F08283

(1) 566 (DG)
(2) 1153 (RD/BK)
(3) 57 (BK)
(4) 400 (LB/BK)
(5) *186 (BN/LB)
(6) *57 (BK)
(7) 405 (VT/LB)
(8) 404 (VT/LG)

C220a (WH)

14401

Instrument cluster

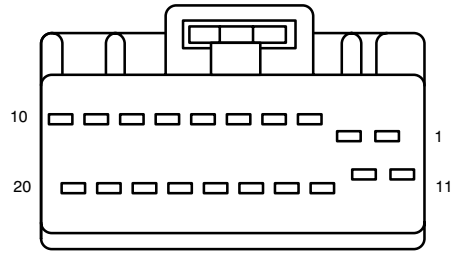

F20017

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
3	904 (LG/RD)	Generator/Battery indicator, control
4	210 (LB)	Four–wheel drive, High, indicator, control
5	1017 (BK/WH)	Check cap indicator lamp, signal
6	–	not used
7	2 (WH/LB)	Turn lamps, feed, right front
8	–	not used
9	–	not used
10	729 (RD/WH)	Voltage supplied at all times (overload protected)
11	1003 (GY/YE)	Voltage in Run (overload protected)
12	932 (GY/WH)	High beam, indicator, control
13	608 (BK/YE)	Air bag indicator, control
14	203 (OG/LB)	speed control, indicator, control
15	–	not used
16	603 (DG)	Anti–lock brake indicator, control
17	162 (LG/RD)	Parking brake switch (15A851), signal
18	531 (DG/YE)	Brake fluid level switch (2L414), signal
19	512 (TN/LG)	Brake indicator, control
20	31 (WH/RD)	Engine oil pressure indicator, control