C373

14B122

B224
Driver memory seat
rear height sensor

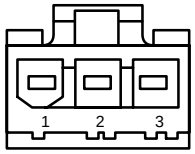

F03111

Pin	Circuit	Circuit function
1	446 (OG/WH)	Sensor, feed, from, Driver seat module (14C718)
2	444 (LG/BK)	Driver seat module (14C718), to, Power seat motor assembly, left
3	447 (OG/RD)	Sensor, feed, from, Driver seat module (14C718)

C380

14B079

O40
Power point, console (19N236)

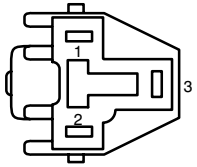

F03193

Pin	Circuit	Circuit function
1	1542 (RD)	Voltage supplied at all times (overload protected)
2	–	not used
3	57 (BK)	Ground

C383

14B122

B223
Driver memory seat
front height sensor

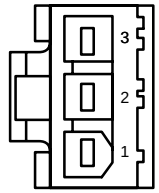

F03111

Pin	Circuit	Circuit function
1	447 (OG/RD)	Sensor, return, from, Driver seat module (14C718)
2	443 (LG/RD)	Driver seat module (14C718), to, Power seat motor assembly, left
3	446 (OG/WH)	Sensor, feed, from, Driver seat module (14C718)

C395

14A005

Y17
Speaker, left rear
(18808)

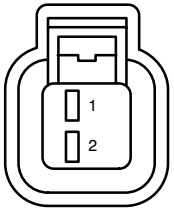

F02069

Pin	Circuit	Circuit function
1	800 (GY/LB)	Audio signal negative
	827 (TN/WH)	Audio signal negative
2	801 (TN/YE)	Audio signal positive

C396

14A005

Y19
Speaker, right rear
(18808)

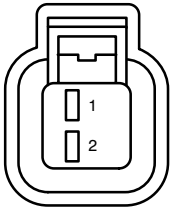

F02069

Pin	Circuit	Circuit function
1	802 (OG/RD)	Audio signal negative
	825 (TN/LG)	Audio signal negative
2	803 (BN/PK)	Audio signal positive