C180

12B637

B41
Camshaft position sensor (6B288)

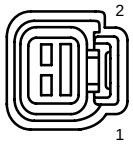

F02109

Pin	Circuit	Circuit function
1	796 (LB)	Camshaft position sensor (6B288), signal, return
2	795 (DG)	Camshaft position sensor (6B288), to, Powertrain Control Module (PCM) (12A650)

C181

12B637

Y108
Fuel injector 1 (9F593)

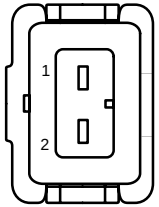

F02089

Pin	Circuit	Circuit function
1	555 (TN)	Fuel injector 1, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C182

12B637

Y109
Fuel injector 2 (9F593)

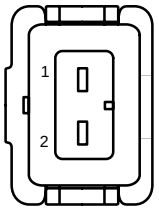

F02089

Pin	Circuit	Circuit function
1	556 (WH)	Fuel injector 2, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C183

12B637

Y110
Fuel injector 3 (9F593)

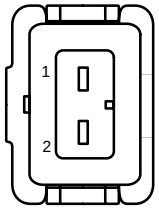

F02089

Pin	Circuit	Circuit function
1	557 (BN/YE)	Fuel injector 3, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C184

12B637

Y111
Fuel injector 4 (9F593)

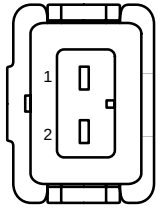

F02089

Pin	Circuit	Circuit function
1	558 (BN/LB)	Fuel injector 4, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)

C185

12B637

Y112
Fuel injector 5 (9F593)

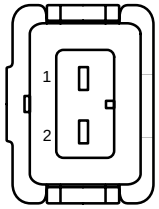

F02089

Pin	Circuit	Circuit function
1	559 (TN/BK)	Fuel injector 5, control
2	361 (RD)	Voltage supplied in Start and Run (overload protected)