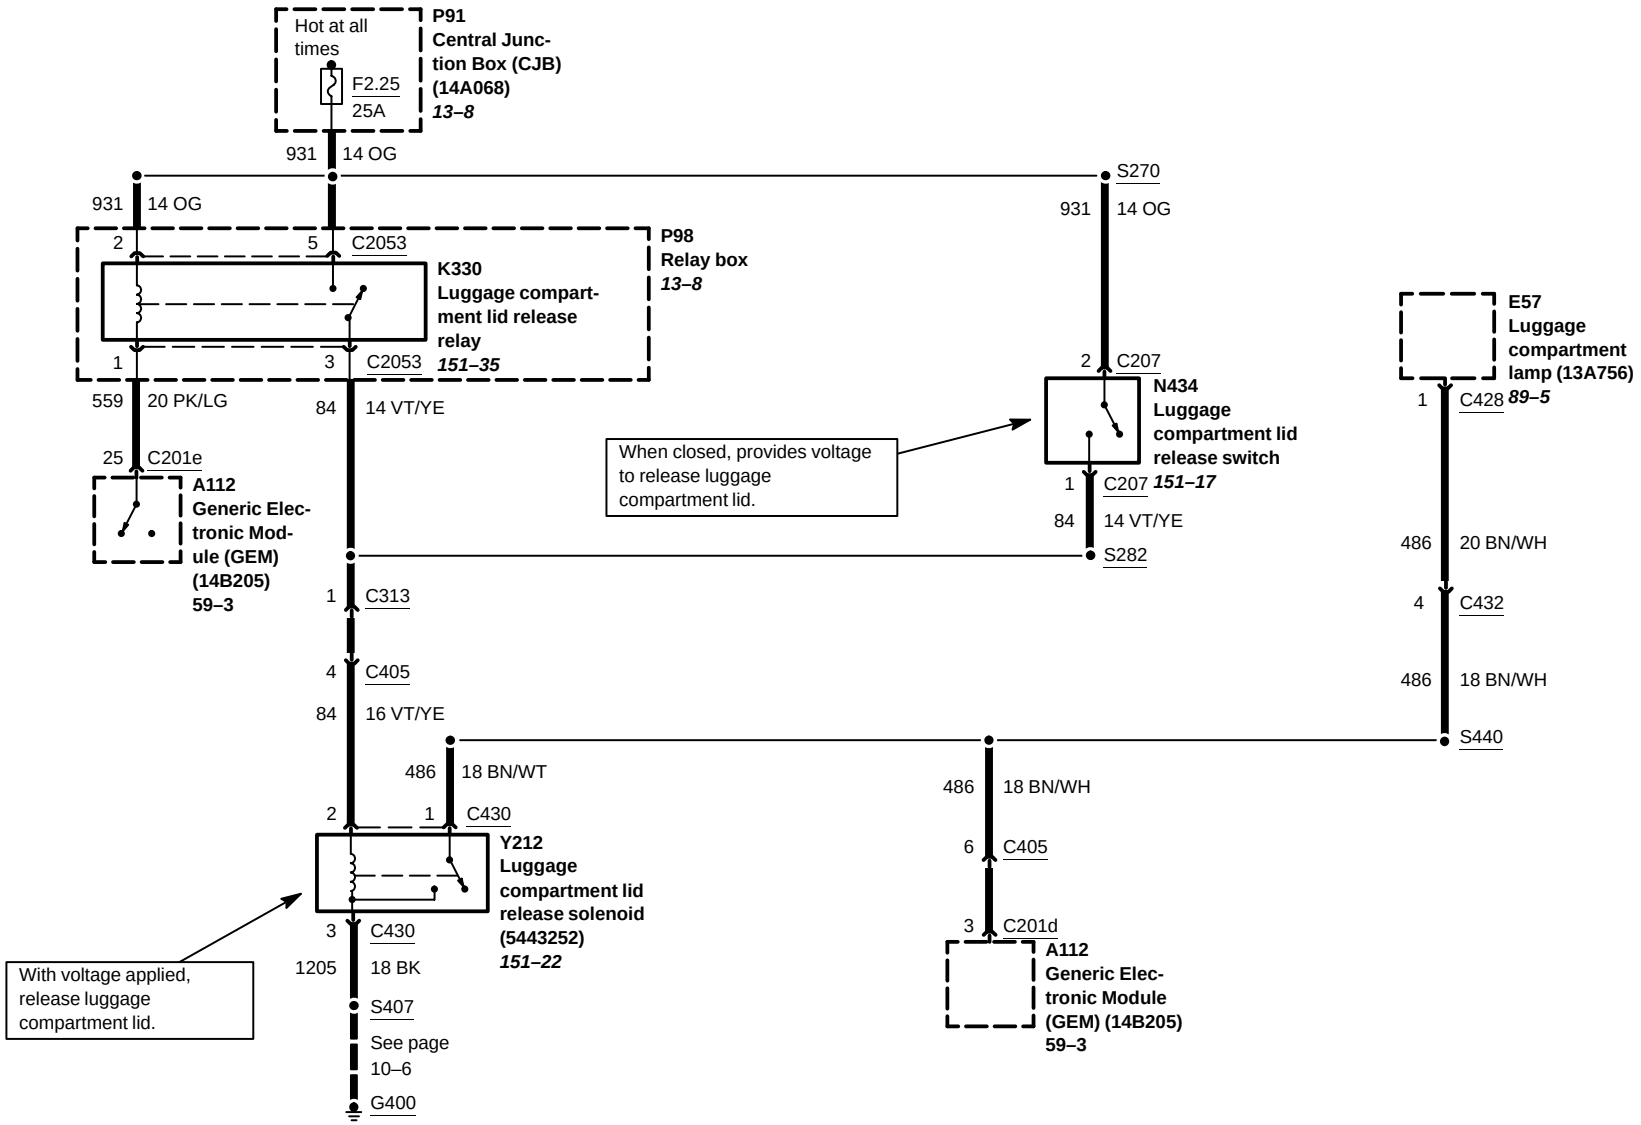
Hot at all times
F2.25
25A
P91
Central Junction Box (CJB)
(14A068)
13–8
931 14 OG
931 14 OG
S270
931 14 OG
2
5
C2053
K330
Luggage compartment lid release relay
151–35
P98
Relay box
13–8
1
3
C2053
559 20 PK/LG
84 14 VT/YE
25
C201e
A112
Generic Electronic Module (GEM)
(14B205)
59–3
When closed, provides voltage to release luggage compartment lid.
2
C207
N434
Luggage compartment lid release switch
151–17
1
C207
84 14 VT/YE
S282
E57
Luggage compartment lamp (13A756)
89–5
1
C428
486 20 BN/WH
4
C432
486 18 BN/WH
S440
1
C313
4
C405
84 16 VT/YE
486 18 BN/WT
2
1
C430
Y212
Luggage compartment lid release solenoid
(5443252)
151–22
3
C430
1205 18 BK
S407
See page 10–6
G400
With voltage applied, release luggage compartment lid.
486 18 BN/WH
6
C405
3
C201d
A112
Generic Electronic Module (GEM) (14B205)
59–3