C524

14A488

Power window motor, driver side front (23395)

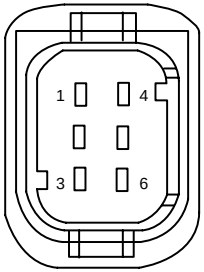

Pin	Circuit	Circuit function
1	31-AJ82 (BK/WH)	Ground
2	10-AJ82 (GY/WH)	Signal 2 (Y–direction, reverse, downward)
3	32-AJ27 (WH/VT)	Switched between: Battery voltage, Ground or Open
4	7-AJ82 (YE/VT)	Voltage DC supplied at all times (sensor)
5	8-AJ82 (WH/VT)	Sensor signal
6	33-AJ27 (YE/VT)	Switched between: Battery voltage, Ground or Open

C525

14A005

Door lock unit, driver side front (5421813)

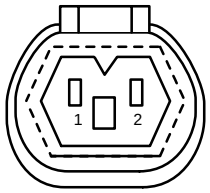

F02227

Pin	Circuit	Circuit function
1	33-AA10 (YE/BK)	Switched between: Battery voltage, Ground or Open
2	32-AA11 (WH/VT)	Switched between: Battery voltage, Ground or Open

C526

14A005

Door ajar switch, driver side front (14018)

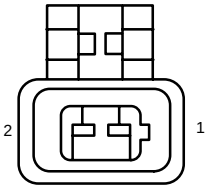

F02117

Pin	Circuit	Circuit function
1	30S-GL46 (RD/YE)	Voltage supplied at all times (not overload protected), switch
2	31-AA58 (BK/YE)	Ground

C601

14A005

Exterior rear view mirror, right



F03079

Pin	Circuit	Circuit function
1	32-AD30 (WH/BK)	Switched between: Battery voltage, Ground or Open
2	34-AD29 (BU/OG)	Switched between: Battery voltage, Ground or Open
3	33-AD10 (YE/BK)	Switched between: Battery voltage, Ground or Open