C627

14A005

N217
Seat adjust switch,
passenger side front

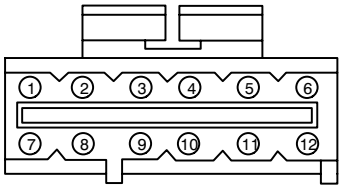

F12163

Pin	Circuit	Circuit function
1	987 (RD/WH)	Seat adjust switch, to, Passenger seat horizontal motor
2	989 (RD/LG)	Seat adjust switch, to, rear, Tilt, Seat motor
3	985 (RD/LB)	Seat adjust switch, to, rear, Tilt, Seat motor
4	–	not used
5	918 (GY)	Passenger seat backrest motor, Up
6	517 (BK/WH)	Voltage supplied at all times (overload protected)
7	986 (YE/WH)	Seat adjust switch, to, Passenger seat horizontal motor
8	988 (YE/LG)	Seat adjust switch, to, rear, Tilt, Seat motor
9	984 (YE/LB)	Seat adjust switch, to, rear, Tilt, Seat motor
10	–	not used
11	919 (GY/BK)	Passenger seat backrest motor, Down
12	57 (BK)	Ground

C629

14A005

N627
Front passenger
window/door lock
switch

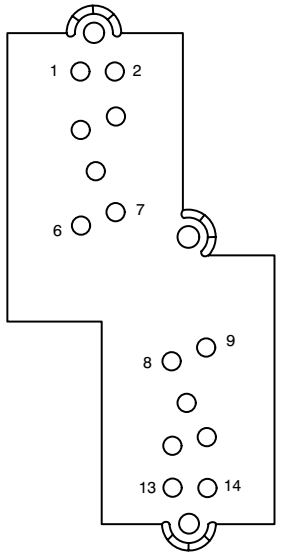

Pin	Circuit	Circuit function
1	484 (OG/BK)	Headlamp switch, on input
2	57 (BK)	Ground
3	117 (PK/BK)	Door lock, output – without keyless entry
	119 (PK/YE)	Door lock switch, input
4	120 (PK/LG)	Door unlock, switch, input
5	517 (BK/WH)	Voltage supplied at all times (overload protected)
	54 (LG/YE)	Voltage supplied at all times (overload protected)
6	119 (PK/YE)	Door lock switch, input – Hot in Start
7	118 (PK/OG)	Door unlock, output – Hot in Start, without keyless entry
	120 (PK/LG)	Door unlock, switch, input
8	333 (YE/RD)	Window motor, feed, Up
9	313 (WH/YE)	Window switch, feed, right front, Up
10	170 (RD/LB)	Window lockout, switched power, output
11	314 (TN/LB)	Window switch, feed, right front, Down
12	334 (RD/YE)	Window motor, feed, Down
13	57 (BK)	Ground
14	484 (OG/BK)	Headlamp switch, on input