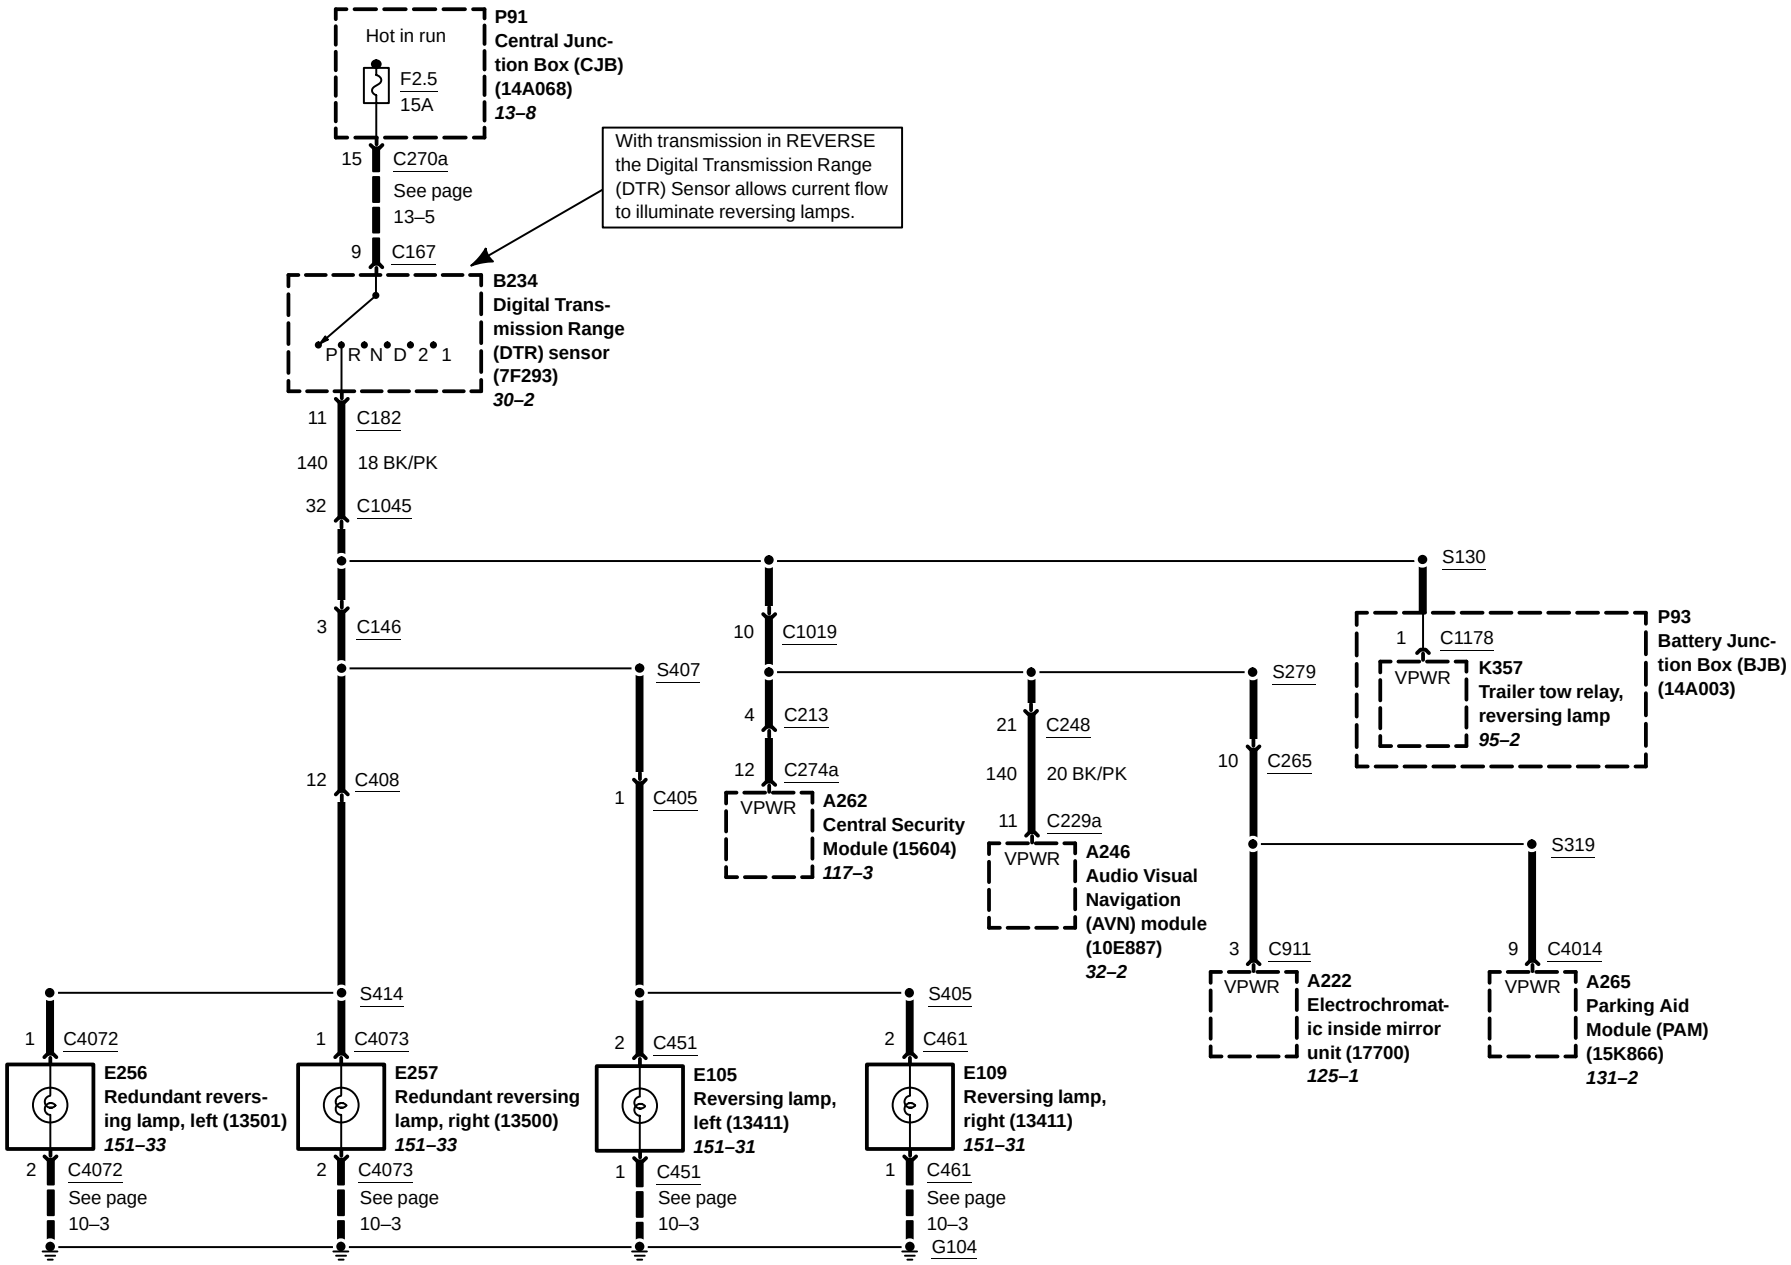
Hot in run
F2.5
15A
P91
Central Junction Box (CJB)
(14A068)
13–8
15
C270a
See page 13–5
With transmission in REVERSE the Digital Transmission Range (DTR) Sensor allows current flow to illuminate reversing lamps.
9
C167
B234
Digital Transmission Range (DTR) sensor
(7F293)
30–2
P R N D 2 1
11
C182
140
18 BK/PK
32
C1045
3
C146
12
C408
S407
1
C405
10
C1019
4
C213
12
C274a
VPWR
A262
Central Security Module (15604)
117–3
21
C248
140
20 BK/PK
11
C229a
VPWR
A246
Audio Visual Navigation (AVN) module
(10E887)
32–2
S130
1
C1178
VPWR
K357
Trailer tow relay, reversing lamp
95–2
P93
Battery Junction Box (BJB)
(14A003)
S279
10
C265
S319
3
C911
VPWR
A222
Electrochromatic inside mirror unit (17700)
125–1
9
C4014
VPWR
A265
Parking Aid Module (PAM)
(15K866)
131–2
S414
1
C4072
E256
Redundant reversing lamp, left (13501)
151–33
2
C4072
See page 10–3
1
C4073
E257
Redundant reversing lamp, right (13500)
151–33
2
C4073
See page 10–3
S405
2
C451
E105
Reversing lamp, left (13411)
151–31
1
C451
See page 10–3
2
C461
E109
Reversing lamp, right (13411)
151–31
1
C461
See page 10–3
G104