60-5 INSTRUMENT CLUSTER

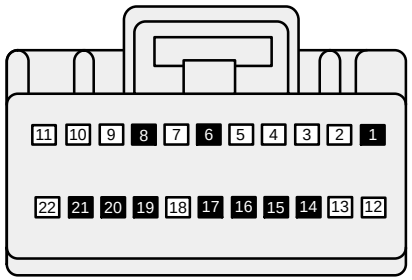

C239

INSTRUMENT CLUSTER

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	1403 (BK/WH)	I/P Dimmer Switch
3	1405 (LB/BK)	I/P Dimmer Switch
4	1410 (TN/OG)	Switch Signal Return
5	1 (DB)	Horn Sense
6	–	NOT USED
7	1411 (GY/OG)	Message Center Signal Feed
8	–	NOT USED
9	1414 (LG/VT)	Key Warning Switch
10	1402 (RD/WH)	Headlamp (ON)
11	1001 (WH/YE)	Power Feed (Hot at All Times)
12	702 (WH/BK)	Compass Bus (+)
13	703 (WH/OG)	Compass Bus (–)
14	–	NOT USED
15	–	NOT USED
16	–	NOT USED
17	–	NOT USED
18	1423 (WH/BK)	Auxiliary Blower Sense
19	–	NOT USED
20	–	NOT USED
21	–	NOT USED
22	1400 (TN/WH)	Headlamp (OFF)

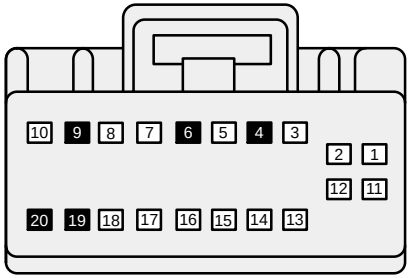

C240

INSTRUMENT CLUSTER

PIN	CIRCUIT	CIRCUIT FUNCTION
1	1083 (LB/BK)	Air Bag Tone
2	1416 (YE/WH)	Autolamps Sense
3	1426 (PK)	Rear Window Defrost Switch
4	–	NOT USED
5	1396 (VT/WH)	Main Light Switch and A/C Mode Switch Return
6	–	NOT USED
7	295 (LB/PK)	Power Feed (Hot in Acc or Run)
8	1112 (WH/LB)	Power Feed (Hot in Start or Run)
9	–	NOT USED
10	1422 (DB/OG)	Rear Blend Door Sense
11	1040 (RD/BK)	Power Feed (Hot in Run)
12	1205 (BK)	Ground
13	1393 (LB/RD)	Left Turn Signal Switch
14	1392 (LG/OG)	Right Turn Signal Switch
15	1398 (PK/WH)	Blower Switch
16	1401 (BK/LG)	Park Lamp
17	1412 (WH/PK)	Traction Assist Disable Signal
18	1424 (TN/BK)	A/C Indicator
19	–	NOT USED
20	–	NOT USED