C605

14A205

N205
Door lock switch, passenger side

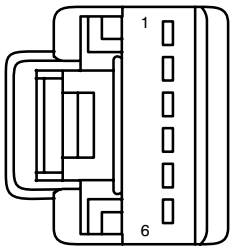

F006179

Pin	Circuit	Circuit Function
1	8-AA20 (WH/BU)	Sensor signal
2	8-AA21 (WH/GN)	Sensor signal
3	–	not used
4	31-LH42 (BK)	Ground
5	–	not used
6	29S-LH42 (OG/BU)	Voltage supplied at all times (overload protected), Switched

C606

14A205

E178
Door entry lamp, right front

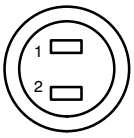

F02063

Pin	Circuit	Circuit Function
1	29S-LC36 (OG/YE)	Voltage supplied at all times (overload protected), Switched
2	9-LC36 (BN)	Sensor signal return (reference/ground)

C608

14630

M79
Power window motor, passenger side front

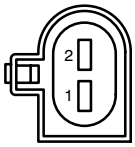

F02065

Pin	Circuit	Circuit Function
1	33-AJ27 (YE/VT)	Switched between: Battery voltage, Ground or Open
2	32-AJ27 (WH/VT)	Switched between: Battery voltage, Ground or Open

C609

14630

A173
Door lock unit, passenger side front

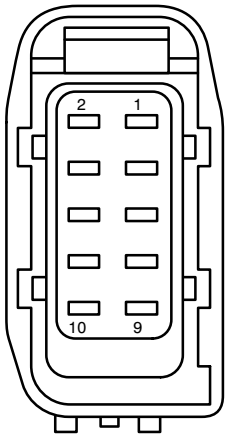

F16030

Pin	Circuit	Circuit Function
1	–	not used
2	33-AA20 (YE/BU)	Switched between: Battery voltage, Ground or Open
3	–	not used
4	–	not used
5	–	not used
6	31-AA58B (BK)	Ground
7	–	not used
8	31S-GL47 (BK/BU)	Ground, Switched
9	–	not used
10	32-AA21 (WH/GN)	Switched between: Battery voltage, Ground or Open