C1180

12B637

B41
Camshaft position sensor (6B288)

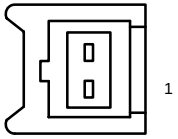

F02012

Pin	Circuit	Circuit function
1	795 (DG)	Camshaft position sensor (6B288) to Powertrain Control Module (PCM) (12A650)
2	359 (GY/RD)	signal, return

C1181

12B637

Y108
Fuel injector 1
(9F593)

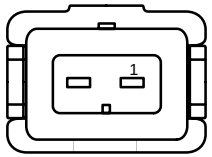

F02089

Pin	Circuit	Circuit function
1	555 (TN)	Fuel injector 1, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C1182

12B637

Y109
Fuel injector 2
(9F593)

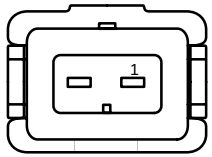

F02089

Pin	Circuit	Circuit function
1	556 (WH)	Fuel injector 2, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C1183

12B637

Y110
Fuel injector 3
(9F593)

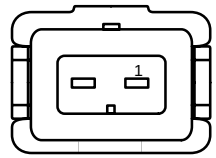

F02089

Pin	Circuit	Circuit function
1	557 (BN/YE)	Fuel injector 3, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C1184

12B637

Y111
Fuel injector 4
(9F593)

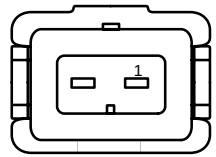

F02089

Pin	Circuit	Circuit function
1	558 (BN/LB)	Fuel injector 4, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)

C1185

12B637

Y112
Fuel injector 5
(9F593)

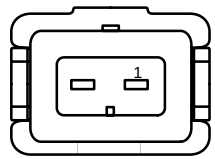

F02089

Pin	Circuit	Circuit function
1	559 (TN/BK)	Fuel injector 5, control
2	1138 (VT/WH)	Voltage supplied in Start and Run (overload protected)