## C1234

### 14305

A414
Soft start module

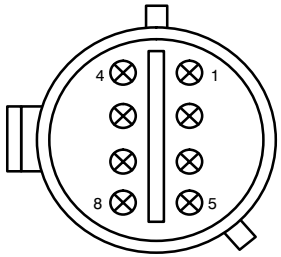


F08050

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 605 (RD) | Voltage supplied at all times (not overload protected) |
| 2 | 599 (PK/LG) | Relay, control, output |
| 3 | – | not used |
| 4 | 295 (LB/PK) | Voltage in Run (overload protected) |
| 5 | 639 (LG/VT) | High speed cooling fan relay, control |
| 6 | 57 (BK) | Ground |
| 7 | – | not used |
| 8 | – | not used |

## C1235

### 12A581

K380
Injector Driver Module (IDM) power relay

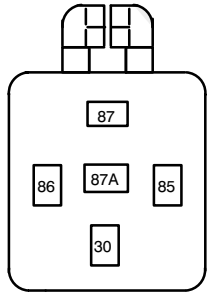


F05105

| Pin | Circuit | Circuit function |
|---|---|---|
| 30 | 876 (DG/LG) | Power, input |
| 85 | 814 (WH/BK) | Injector Driver Module (IDM) power relay, control |
| 86 | 20 (WH/LB) | Voltage supplied in Start and Run (overload protected) |
| 87 | 876 (DG/LG) | Power, input |
| 87A | – | not used |

## C1237a

### 9D930

R117
Resistor cap 1

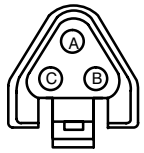


F03015

| Pin | Circuit | Circuit function |
|---|---|---|
| A | 914 (TN/OG) | SCP Bus + |
| B | 915 (PK/LB) | SCP Bus – |
| C | 48 | Shield |