C4012

14N139

B253
Parking aid sensor,
inner right (15K859)

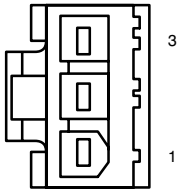

F03111

Pin	Circuit	Circuit function
1	1439 (BN/PK)	Parking Aid Module (PAM) (15K866), Sensor, Power
2	1443 (WH/LB)	Parking Aid Module (PAM) (15K866), to, Parking aid sensor, inner right (15K859), input
3	1440 (DG/YE)	Parking Aid Module (PAM) (15K866), Sensor, return

C4014

15K867

A265
Parking Aid Module
(PAM) (15K866)

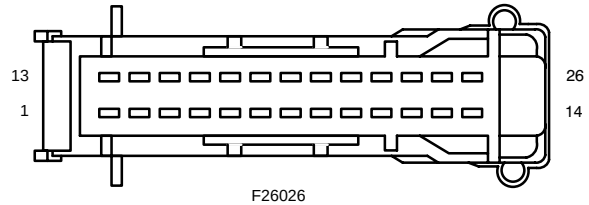

F26026

Pin	Circuit	Circuit function
1	1040 (RD/BK)	Voltage in Run (overload protected)
2	–	not used
3	1205 (BK)	Ground
4	–	not used
5	70 (LB/WH)	ISO Bus
6	–	not used
7	1435 (DG/VT)	On/Off signal
8	–	not used
9	1367 (WH/YE)	Right, Backup Lamps, control
10	1442 (DG/WH)	Parking Aid Module (PAM) (15K866), to, Parking aid sensor, inner left (15K859), input
11	1441 (WH/LG)	Parking Aid Module (PAM) (15K866), to, Parking aid sensor, outer left (15K859), input
12	–	not used
13	–	not used
14	1437 (BK/PK)	Parking Aid Module (PAM) (15K866), to, Parking aid speaker (–)
15	1439 (BN/PK)	Parking Aid Module (PAM) (15K866), Sensor, Power
16	1440 (DG/YE)	Parking Aid Module (PAM) (15K866), Sensor, return
17	1438 (DG)	Parking Aid Module (PAM) (15K866), to, Parking aid speaker (–)
18	–	not used
19	1436 (VT/OG)	On/Off signal, Light emitting diode (LED), control
20	–	not used
21	–	not used
22	–	not used
23	1443 (WH/LB)	Parking Aid Module (PAM) (15K866), to, Parking aid sensor, inner right (15K859), input
24	1444 (DB/YE)	Parking Aid Module (PAM) (15K866), to, Parking aid sensor, outer right (15K859), input
25	–	not used
26	–	not used