C4108b

19B113/14A005

Y262
Subwoofer amplifier,
front

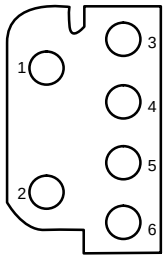

Pin	Circuit	Circuit function
1	173 (DG/VT)	Radio (18806) – Subwoofer, High, mute
2	–	not used
3	167 (BN/OG)	Radio (18806) – Subwoofer, High, +
4	168 (RD/BK)	Radio (18806) – Subwoofer, High, –
5	–	not used
6	–	not used

C4109a

14A005
19B113

Y263
Subwoofer amplifier,
rear

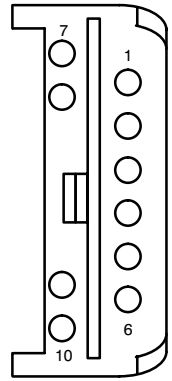

F10009

Pin	Circuit	Circuit function
1	694 (BK/LG)	Ground
2	694 (BK/LG)	Ground
3	694 (BK/LG)	Ground
4	828 (VT/LB)	Voltage supplied at all times (overload protected)
5	828 (VT/LB)	Voltage supplied at all times (overload protected)
6	828 (VT/LB)	Voltage supplied at all times (overload protected)
7	822 (BK/LG)	Subwoofer amplifier, rear, to Subwoofer, +
8	287 (BK/WH)	Subwoofer amplifier, rear, to Subwoofer, –
9	–	not used
10	–	not used