C603

14A005

M242
Door lock actuator,
right front

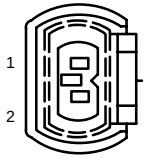

F02116

Pin	Circuit	Circuit function
1	118 (PK/OG)	Door lock, feed
2	117 (PK/BK)	Door lock, output

C606

14A005

E178
Door entry lamp,
right front (13776)

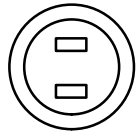

F02063

Pin	Circuit	Circuit function
1	53 (BK/LB)	Interior lamp relay, switched power, output
2	57 (BK)	Ground

C605

14A005

N205
Door lock switch,
passenger side
(14028)

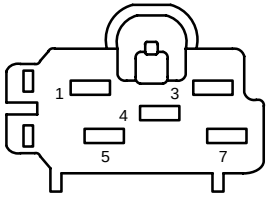

F07044

Pin	Circuit	Circuit function
1	57 (BK0	Ground
2	120 (PK/LG)	Door unlock relay, control
3	118 (PK/OG)	Door lock, feed
3	120 (PK/LG)	Door unlock relay, control
4	517 (BK/WH)	Voltage supplied at all times (overload protected)
4	57 (BK)	Ground
5	296 (WH/VT)	Fused accessory relay, switched power, output
6	117 (PK/BK)	Door lock,output
6	119 (PK/YE)	Door lock relay, control
7	119 (PK/YE)	Door lock relay, control

C612

19A123/14A005

Y18
Speaker, right front
(18808)

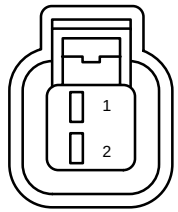

F02069

Pin	Circuit	Circuit function
1	805 (WH/LG)	Speaker, right front (18808) +
2	811 (DG/OG)	Speaker, right front (18808) –

C622a

14A005

M260
Exterior rear view
mirror, right

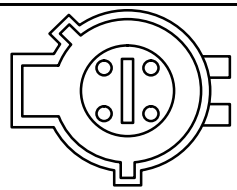

F04075

Pin	Circuit	Circuit function
1	542 (YE)	Mirror motor, feed
2	543 (DG)	Voltage supplied at all times (overload protected)
3	–	not used
4	544 (VT)	Up/Down mirror movement, Right