C1064 (GY)

12B637

Engine Coolant Temperature (ECT) sensor (12A648)

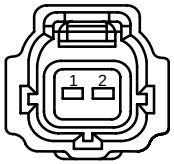

F02091

Pin	Circuit	Circuit function
1	354 (LG/RD)	Engine Coolant Temperature (ECT) sensor (12A648), input
2	359 (GY/RD)	signal, return

C1065 (BK)

12B637

Ignition coil (12029)

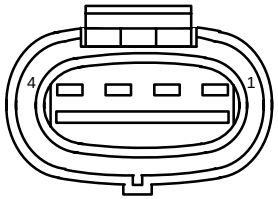

F04215

Pin	Circuit	Circuit function
1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
2	96 (TN/OG)	Ignition coil (12029)
3	97 (TN/LG)	Ignition coil (12029)
4	95 (TN/WH)	Ignition coil (12029)

C1066 (BK)

12B637

Idle Air Control (IAC) valve (9F715)

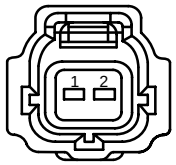

F02091

Pin	Circuit	Circuit function
1	361 (RD)	Voltage supplied in Start and Run (overload protected)
2	264 (WH/LB)	Idle Air Control (IAC) valve (9F715), control

C1078 (BK)

14A280

A/C high pressure switch (19D594)

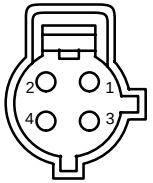

F04195

Pin	Circuit	Circuit function
1	570 (BK/WH)	Ground
2	–	not used
3	441 (RD/YE)	A/C pressure switch, to A/C cycling switch
4	–	not used

C1081 (BK)

14290

A/C compressor cycling switch (19E561)

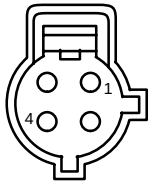

F04195

Pin	Circuit	Circuit function
1	441 (RD/YE)	A/C pressure switch, to A/C cycling switch
2	–	not used
3	–	not used
4	347 (BK/YE)	A/C clutch relay, switched output

C1087 (BK)

12B637

Manifold Absolute Pressure (MAP) sensor

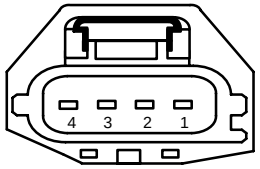

F04217

Pin	Circuit	Circuit function
1	359 (GY/RD)	signal, return
2	–	not used
3	351 (BN/WH)	Reference, voltage
4	358 (LG/BK)	Manifold Absolute Pressure (MAP) sensor, to, Powertrain Control Module (PCM) (12A650)