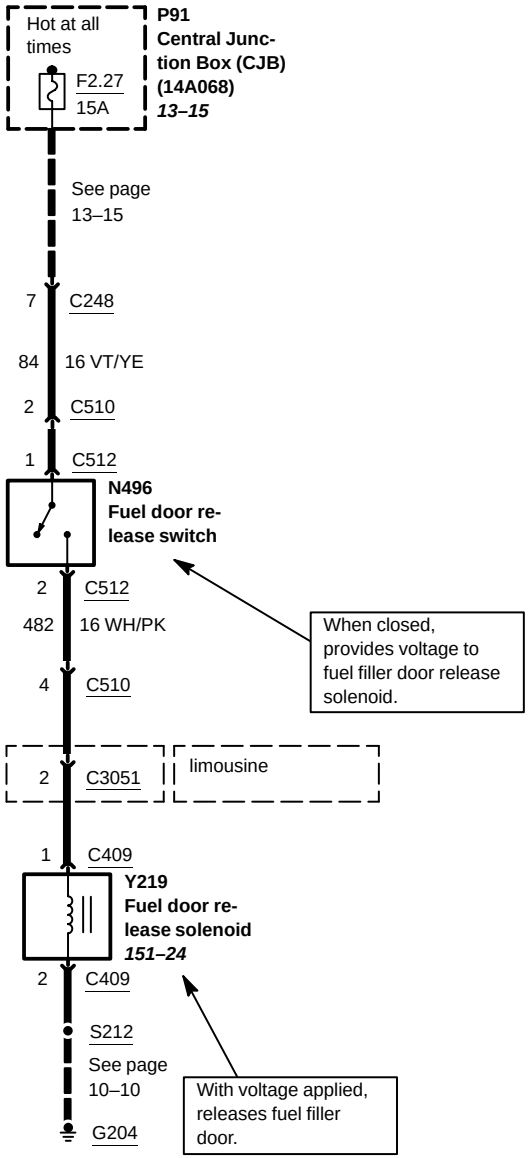
Hot at all times
F2.27
15A
P91
Central Junction Box (CJB)
(14A068)
13–15
See page 13–15
7
C248
84
16 VT/YE
2
C510
1
C512
N496
Fuel door release switch
2
C512
482
16 WH/PK
4
C510
When closed, provides voltage to fuel filler door release solenoid.
2
C3051
limousine
1
C409
Y219
Fuel door release solenoid
151–24
2
C409
S212
See page 10–10
G204
With voltage applied, releases fuel filler door.