C3087

19F504

Running board lamp, right rear

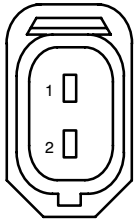

F02108

Pin	Circuit	Circuit function
1	53 (BK/LB)	Interior lamp relay, switched power, output
2	57 (BK)	Ground

C3094 (BK)

14405

Fuel sender, primary

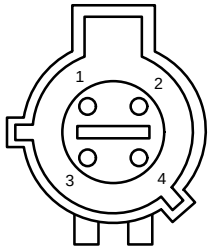

F04082

Pin	Circuit	Circuit function
1	–	not used
2	675 (YE/LB)	Sensor signal return (reference/ground)
3	–	not used
4	396 (BK/OG)	Reference voltage

C3095 (BK)

14405

Fuel sender, secondary

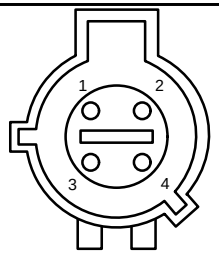

F04082

Pin	Circuit	Circuit function
1	–	not used
2	673 (DB/YE)	Sensor signal return (reference/ground)
3	–	not used
4	396 (BK/OG)	Reference voltage

C3156 (BK)

12614

Air tank pressure sensor

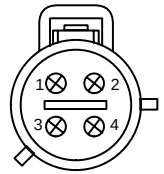

F04263

Pin	Circuit	Circuit function
1	428 (OG/BK)	Sensor signal +
2	427 (PK/BK)	Sensor signal
3	–	not used
4	429 (VT/LG)	Sensor signal return (reference/ground)

C3157

12614

Air tank moisture removal valve

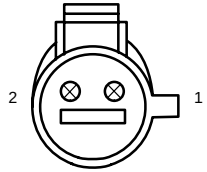

F02208

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	423 (VT/LG)	switched power

C3158 (BK)

12614

Air tank valve

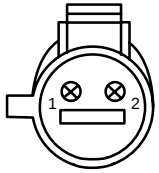

F02373

Pin	Circuit	Circuit function
1	424 (TN)	switched power
2	57 (BK)	Ground