C238 (GY)

14401

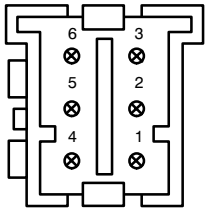

F06327

(1) 37 (YE)
(2) 49 (OG)
(3) 2 (WH/LB)

14A411

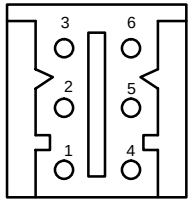

F06331

(4) 868 (GY/RD)
(5) 867 (DB)
(6) 3 (LG/WH)

C248 (BN)

* Cutaway

12A581/14A200

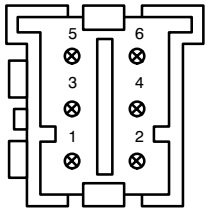

F06327

(1) *57 (BK)
43 (DB)
(2) *43 (DB)
57 (BK)
(3) *53 (BK/LB)
511 (LG)
(4) *511 (LG)
(5) 22 (LB/BK)
*14 (BN)
(6) 14 (BN)
*22 (LB/BK)

14A348

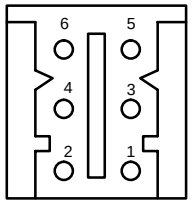

F06331

(1) 206 (WH)
(2) 43 (DB)
(3) 14 (BN)
(4) 511 (LG)
(5) –
(6) 50 (RD)

C250 (GY)

14401/14A200

Ignition switch
(11572)

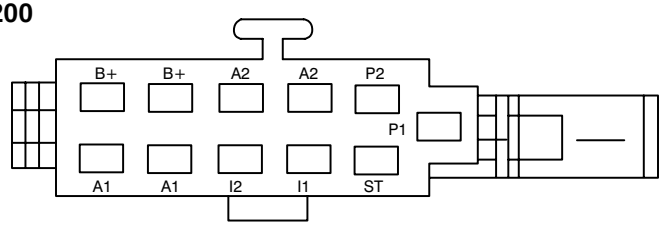

F11039

Pin	Circuit	Circuit function
B+	37 (YE)	Voltage supplied at all times (overload protected)
B+	37 (YE)	Voltage supplied at all times (overload protected)
A2	687 (GY/YE)	Voltage in Run (overload protected)
A2	687 (GY/YE)	Voltage in Run (overload protected)
P2	41 (BK/LB)	Voltage in Run (overload protected)
P1	531 (DG/YE)	Brake fluid level switch (2L414), signal
A1	–	not used
A1	297 (BK/LG)	Voltage in Run or Accessory (overload protected)
I2	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
I1	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)
ST	33 (WH/PK)	switched power, to starter solenoid