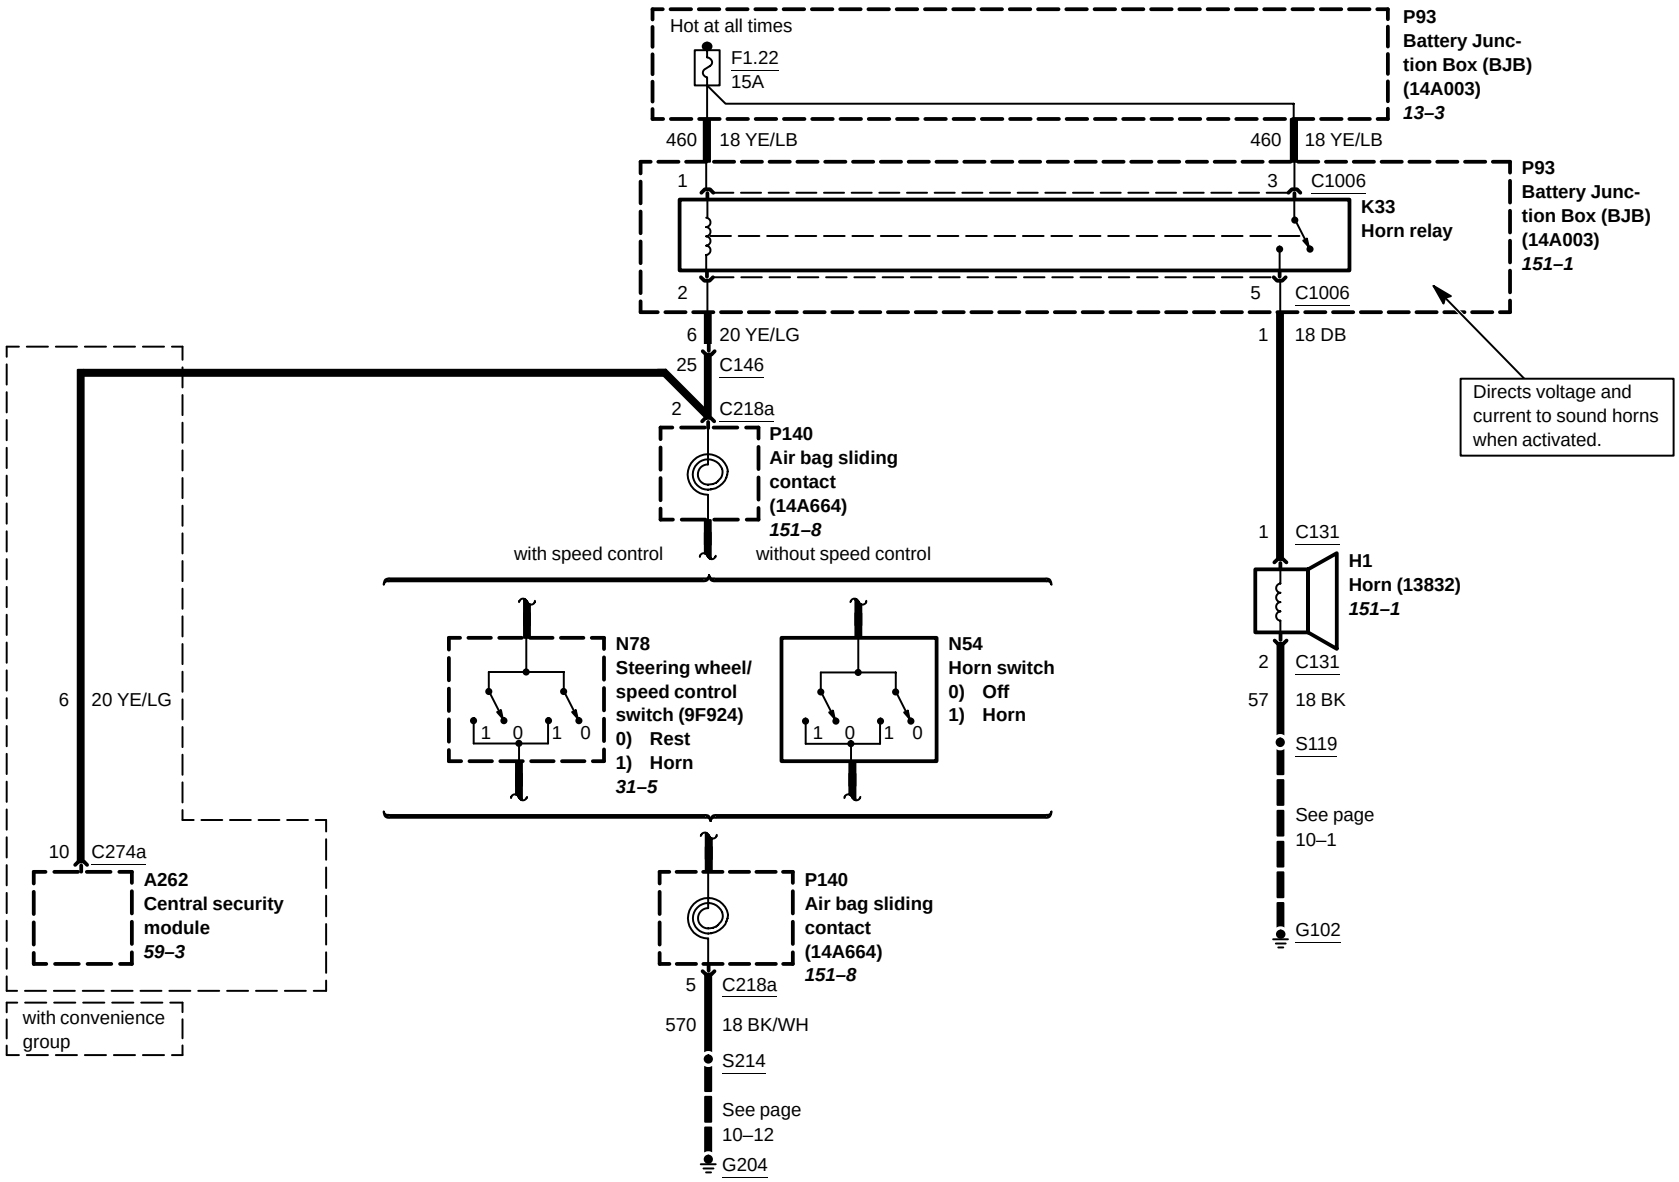
Hot at all times
F1.22
15A
P93
Battery Junction Box (BJB)
(14A003)
13–3
460
18 YE/LB
460
18 YE/LB
1
3
C1006
K33
Horn relay
P93
Battery Junction Box (BJB)
(14A003)
151–1
2
5
C1006
6
20 YE/LG
25
C146
1
18 DB
Directs voltage and current to sound horns when activated.
2
C218a
P140
Air bag sliding contact
(14A664)
151–8
with speed control
without speed control
1
C131
H1
Horn (13832)
151–1
N78
Steering wheel/ speed control switch (9F924)
0) Rest
1) Horn
31–5
N54
Horn switch
0) Off
1) Horn
2
C131
57
18 BK
S119
See page 10–1
G102
6
20 YE/LG
10
C274a
A262
Central security module
59–3
with convenience group
P140
Air bag sliding contact
(14A664)
151–8
5
C218a
570
18 BK/WH
S214
See page 10–12
G204