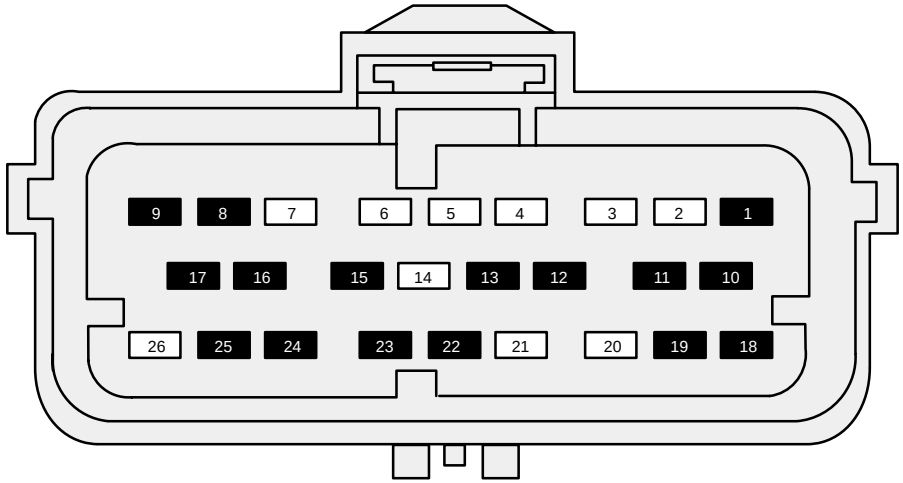

C276

RESTRAINTS CONTROL MODULE (RCM)

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED	14	611 (WH/OG)	Vehicle Identification
2	611 (WH/OG)	Power (Hot in Run)	15	–	NOT USED
3	614 (GY/OG)	Driver Air Bag Feed	16	–	NOT USED
4	615 (GY/WH)	Driver Air Bag Return	17	–	NOT USED
5	70 (LB/WH)	ISO 9141 Communication Network	18	–	NOT USED
6	607 (LB/OG)	Passenger Air Bag Feed	19	–	NOT USED
7	616 (PK/BK)	Passenger Air Bag Return	20	608 (BK/YE)	Air Bag Indicator Driver
8	–	NOT USED	21	397 (BK/WH)	Ground
9	–	NOT USED	22	–	NOT USED
10	–	NOT USED	23	–	NOT USED
11	–	NOT USED	24	–	NOT USED
12	–	NOT USED	25	–	NOT USED
13	–	NOT USED	26	1083 (LB/BK)	Tone Generator

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C232	14-3
C250	60-3
C352	59-5