C501d

14B121

Driver Door Module

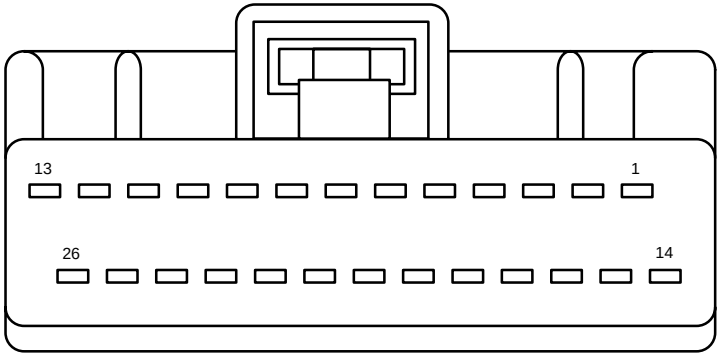

F26018

Pin	Circuit	Circuit function
1	10-AJ43 (GY/VT)	Data link, bus negative
2	–	not used
3	–	not used
4	7S-AJ51 (YE/RD)	Right rear window circuit - Up, switch sense
5	7S-AJ52 (YE)	Right rear window circuit - Down, switch sense
6	–	not used
7	7S-AH27 (YE)	Memory set switch (14776) - indicator
8	7S-AJ49 (YE/GN)	Left rear window circuit - Up, switch sense
9	7S-AJ50 (YE/BU)	Left rear window circuit - Down, switch sense
10	8-AH31 (WH/RD)	Memory set switch (14776) - Set 1
11	8-AH32 (WH/BU)	Memory set switch (14776) - Set 2
12	7-AJ7 (YE/RD)	Master window adjust switch (14529), Reference voltage
13	29S-AA70 (OG/BK)	Key pad illumination
14	34-AD29 (BU/OG)	Up/Down mirror movement, RH side

Pin	Circuit	Circuit function
15	32-AD30 (WH/BK)	Right/Left mirror movement, RH side
16	34-AD31 (BU/WH)	Up/Down mirror movement, LH side
17	32-AD32 (WH/RD)	Right/Left mirror movement, LH side
18	33-AD12 (YE)	Exterior rear view mirror switch (17B676), common
19	8-AA70 (WH/GN)	Key pad, signal
20	10-AA70 (GY/OG)	Key pad, signal
21	7-AA70 (YE/GN)	Key pad, signal
22	7S-AJ20 (YE/BU)	Window lockout, switch sense
23	8-AA10 (WH/BK)	Door lock switch, driver side (14028) - Lock, switch sense
24	8-AA11 (WH/VT)	Door lock switch, driver side (14028) - Unlock, switch sense
25	8-AH27 (WH)	Memory set switch (14776) - Set
26	8-AJ43 (WH/BU)	Data link, bus positive