C3053

18B971

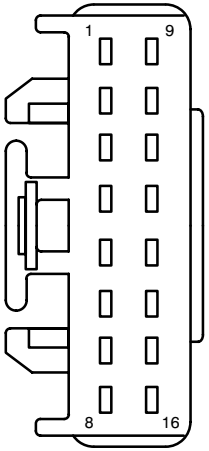

F16029

19B113

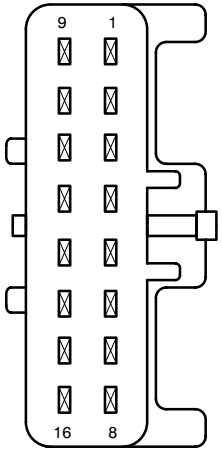

F16030

(1) 1205 (BK)
(2) 1001 (WH/YE)
(3) 1203 (BK/LB)
(4) 1068 (LG/BK)
(5) 832 (LB/PK)
(6) 833 (TN)
(7) 1002 (BK/PK)
(8) 235 (RD/BK)
(9) 48
(10) 1559 (RD)
(11) 1560 (WH)
(12) 1561 (OG)
(13) 1562 (YE)
(14)
(15)
(16)

C3055

14A488

A401
Side air curtain module, driver

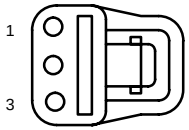

F03035

Pin	Circuit	Circuit function
1	1257 (WH/LB)	Air bag – driver side impact – to module – feed
2	–	not used
3	1258 (BN/LB)	Air bag – driver side impact – to module – return

C3056

14A488

A402
Side air curtain module, passenger

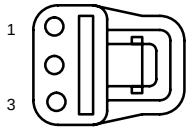

F03035

Pin	Circuit	Circuit function
1	1257 (WH/LB)	Air bag – passenger side impact – to module – feed
	1259 (WH/YE)	
2	–	not used
3	1258 (BK/LB)	Air bag – passenger side impact – to module – return
	1260 (BN/YE)	

C3057

14A488

B265
Side air curtain sensor, driver 1



F02383

Pin	Circuit	Circuit function
1	1262 (BN/LG)	Air bag – driver side impact – crash sensor to module – return
2	1261 (WH/LG)	Air bag – driver side impact – crash sensor to module – feed

C3058

14A488

B267
Side air curtain sensor, passenger 1



F02383

Pin	Circuit	Circuit function
1	1264 (BN)	Air bag – passenger side impact – crash sensor to module – return
2	1263 (WH)	Air bag – passenger side impact – crash sensor to module – feed