C201b

14405

A112
Generic Electronic Module (GEM) (14B205)

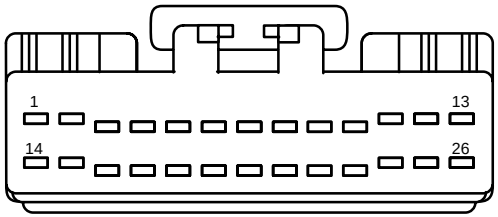

F26015

Pin	Circuit	Circuit function
1	1008 (LG/OG)	Switched ground, with passenger power seat
2	–	not used
3	701 (LB/BK)	Liftgate glass ajar switch
4	759 (LG/YE)	Door ajar switch, left rear
5	760 (PK/LB)	Door ajar switch, right rear
6	1297 (YE/RD)	Passenger front door lock switch, Door lock, input
7	1296 (OG/BK)	Passenger front door lock switch, Door unlock, input
8	–	not used
9	–	not used
10	–	not used
11	118 (PK/OG)	Door unlock, output
12	57 (BK)	Ground
13	117 (PK/BK)	Door lock, output
14	1005 (VT/OG)	Generic Electronic Module (GEM) (14B205) to Interior lamps
15	–	not used
16	1312 (LG/BK)	Door ajar switch, driver side front (14018)
17	867 (DB)	Door ajar switch, passenger side front (14018)
18	700 (WH/VT)	Liftgate ajar switch
19	1317 (DB/LG)	Driver front door lock switch, Door unlock, input
20	1316 (WH/VT)	Driver front door lock switch, Door lock, input
21	–	not used
22	–	not used
23	1088 (PK/WH)	Door unlock, input
24	–	not used
25	163 (RD/OG)	Door unlock, output
26	171 (BK/WH)	Voltage supplied at all times (overload protected)

C210

14401

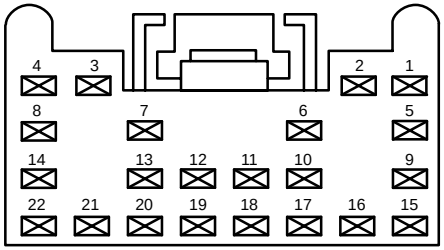

F22027

19B107

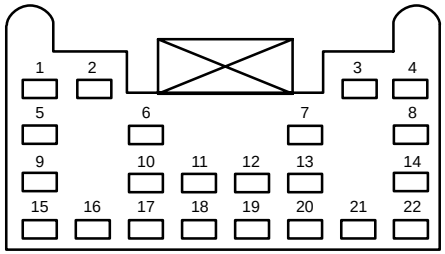

F22029

(1)
(2) 811 (DG/OG)
(3) 174 (GY/BK)
(4) 802 (OG/RD)
(5)
(6) 804 (OG/LG)
(7) 235 (RD/BK)
(8) 803 (BN/PK)
(9) 57 (BK)
(10) 813 (LB/WH)
(11) 385 (WH/RD)
(12) 956 (OG/LG)
(13) 780 (DB)
(14) 801 (TN/YE)
(15) 919 (GY/BK)
(16) 306 (TN/LB)
(17) 805 (WH/LG)
(18) 704 (DG/LG)
(19) 137 (YE/BK)
(20) 19 (LB/RD)
(21)
(22) 800 (GY/LB)