C407 (WH)

14659

N427
Liftgate ajar switch, right



F02135

Pin	Circuit	Circuit Function
1	LI99 (RD/WH)	Liftgate ajar switch, right
2	LIE5 (BK)	Ground

C410 (BK)

14A318

R19
Rear window defrost grid

F01015

Pin	Circuit	Circuit Function
1	HF52 (BK)	Rear window defrost relay, switched output

C411 (WH)

14A318

E174
High mounted stoplamp

F02129

Pin	Circuit	Circuit Function
1	LQ02 (YE/BK)	Brake pedal position switch, input
2	LQE3 (BK)	Ground

C415 (WH)

14659

E216
Liftgate lamp

F02129

Pin	Circuit	Circuit Function
1	LI03 (BN)	Voltage supplied at all times (overload protected)
2	LI92 (BN/WH)	Illuminated entry, Ground

C416 (WH)

14659

N426
Liftgate ajar switch, left



F02135

Pin	Circuit	Circuit Function
1	LI89 (RD/WH)	Liftgate ajar switch, left
2	LIE2 (BK)	Ground

C417 (GY)

14659

M203
Door lock actuator assembly, liftgate

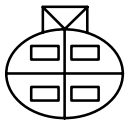

F04157

Pin	Circuit	Circuit Function
1	SEE4 (BK)	Ground
2	PH32 (WH/RD)	Door unlock, output
3	SC14 (RD/BU)	Door unlock, switch sense
4	PH45 (GN/YE)	Door lock, output

C418 (GY)

14659

M218
Rear wiper motor assembly

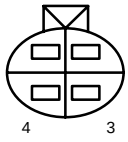

F04157

Pin	Circuit	Circuit Function
1	WBE2 (BK)	Ground
2	WB01 (YE/BK)	Voltage in Run or Accessory (overload protected)
3	WB07 (BU)	Washer – Switched between: Battery voltage, Ground or Open
4	WB08 (BU/YE)	wiper – Switched between: Battery voltage, Ground or Open