## C911 (BK)

### 14334

Electrochromatic inside mirror unit (17700)

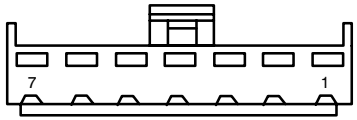


F07075

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 640 (RD/YE) | Voltage supplied in Start and Run (overload protected) |
| 2 | 57 (BK) | Ground |
| 3 | 140 (BK/PK) | Ground supplied in reverse |
| 4 | – | not used |
| 5 | – | not used |
| 6 | 1402 (RD/WH) | Headlamps, On, signal, to, Generic Electronic Module (GEM) (14B205) |
| 7 | 956 (OG/LG) | Generic Electronic Module (GEM) (14B205), to, Interior lamps |

## C912 (BK)

### PIA

Roof opening panel switch (15B691)




F03211

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | Q41 (WH) | Roof opening panel switch (15B691) – Down / Open |
| 2 | Z1 (BK) | Ground |
| 3 | Q43 (VT) | Roof opening panel switch (15B691) – Up / Close |

## C918 (WH)

### 14334

Interior lamp, front

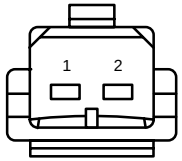


F02233

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1005 (VT/OG) | Generic Electronic Module (GEM) (14B205), to, Interior lamps |
| 2 | 1008 (LG/OG) | Interior lamp, On, control |

## C919 (WH)

### PIA

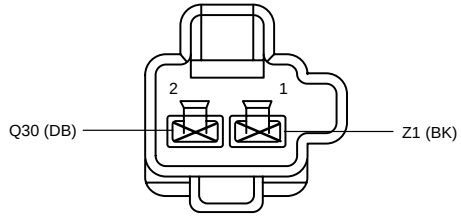


F02347

### 14334

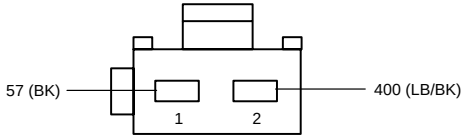


F02349