C240a

14401

A220
Audio unit

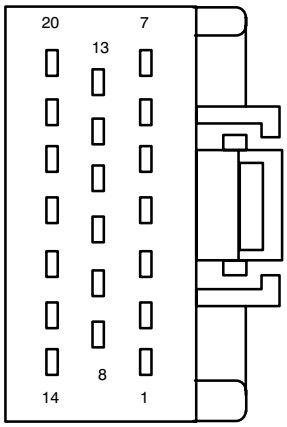

F20031

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	4-EG10 (GY/BK)	Data link, bus positive
4	5-EG10 (BU/YE)	Data link, bus negative
5	8-MD51 (WH/BU)	Sensor signal
6	4-EA8 (GY/VT)	Data link, bus positive
7	5-EA8 (BU/WH)	Data link, bus negative
8	–	not used
9	–	not used
10	8-MD15 (WH/GN)	Sensor signal

Pin	Circuit	Circuit Function
11	2-MC9 (GY/OG)	Audio signal negative
12	1-MC9 (WH/GN)	Audio signal positive
13	48-MD15B	Drain wire
14	8-MD26 (WH/BK)	Sensor signal
15	–	not used
16	48-MD15A	Drain wire
17	1-MD50 (WH/BK)	Audio signal positive
18	2-MD50 (GY/BK)	Audio signal negative
19	1-MD49 (WH/GN)	Audio signal positive
20	2-MD49 (GY/OG)	Audio signal negative