## C205a (GY)

**14401**

Main light switch
(11654)

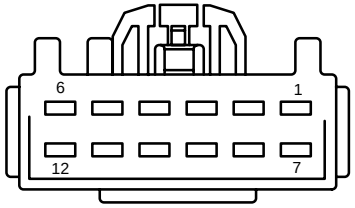


F12107

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | – | not used |
| 2 | 109 (VT/WH) | Voltage supplied at all times (overload protected) |
| 3 | – | not used |
| 4 | – | not used |
| 5 | 477 (LB/BK) | Fog lamp switch, to front fog lamp, Relay |
| 6 | 13 (RD/BK) | Low beam, Ground |
| 7 | 220 (VT/OG) | Autolamp On/Off signal |
| 8 | 651 (BK/YE) | Ground |
| 9 | 15 (RD/YE) | Low beam, Ground |
| 10 | 109 (VT/WH) | Voltage supplied at all times (overload protected) |
| 11 | – | not used |
| 12 | 14 (BN) | Power, Exterior lamps |

## C205b (BK)

**14401**

Main light switch
(11654)

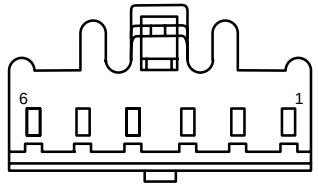


F06209

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 1045 (DB/WH) | Illumination dimmer, output |
| 2 | 1008 (LG/OG) | Interior lamp relay, control |
| 3 | – | not used |
| 4 | 57 (BK) | Ground |
| 5 | – | not used |
| 6 | 14 (BN) | Power, Exterior lamps |

## C207 (BK)

**14401**

Luggage compart-
ment lid release
switch




F02185

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 913 (GY/RD) | Ground |
| 2 | 84 (VT/YE) | Voltage supplied at all times (overload protected) |