C228b

14401

A205
Electronic Automatic Temperature Control (EATC) module

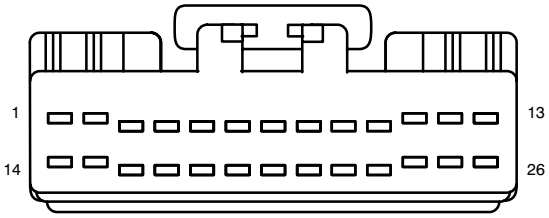

F26015

Pin	Circuit	Circuit Function
1	8-FB5 (WH/BK)	Sensor signal
2	8-FB2 (WH/RD)	Sensor signal
3	8-FB7 (WH)	Sensor signal
4	–	not used
5	91S-FB3 (BN/BU)	Ground, Switched
6	91S-FB4 (BN/GN)	Ground, Switched
7	–	not used
8	10-FA45 (GY/VT)	Signal 2 (Y–direction, reverse, downward)
9	33-FB8 (YE/RD)	Switched between: Battery voltage, Ground or Open
10	32-FB8 (WH/RD)	Switched between: Battery voltage, Ground or Open
11	32-FB2 (WH/RD)	Switched between: Battery voltage, Ground or Open
12	33-FB2 (YE/RD)	Switched between: Battery voltage, Ground or Open
13	32-FB5 (WH/BK)	Switched between: Battery voltage, Ground or Open
14	9-FA48 (BN/GN)	Sensor signal return (reference/ground)

Pin	Circuit	Circuit Function
15	8-FB8 (WH/RD)	Sensor signal
16	8-FB6 (WH/VT)	Sensor signal
17	9-FA2 (BN/RD)	Sensor signal return (reference/ground)
18	91S-FA76 (BN/BU)	Ground, Switched
19	31S-FA23 (BK/BU)	Ground, Switched
20	91S-HB7 (BN/RD)	Ground, Switched
21	–	not used
22	32-FB6 (WH/VT)	Switched between: Battery voltage, Ground or Open
23	33-FB6 (YE/VT)	Switched between: Battery voltage, Ground or Open
24	32-FB7 (WH)	Switched between: Battery voltage, Ground or Open
25	33-FB7 (YE)	Switched between: Battery voltage, Ground or Open
26	33-FB5 (YE/BK)	Switched between: Battery voltage, Ground or Open

C230

14401

Y213
Tweeter, left front



F02048

Pin	Circuit	Circuit Function
1	8-MD30 (WH/BU)	Sensor signal
2	10-MD30 (GY/VT)	Signal 2 (Y–direction, reverse, downward)

C231

14401

Y214
Tweeter, right front



F02048

Pin	Circuit	Circuit Function
1	8-MD31 (WH/GN)	Sensor signal
2	10-MD31 (GY/OG)	Signal 2 (Y–direction, reverse, downward)