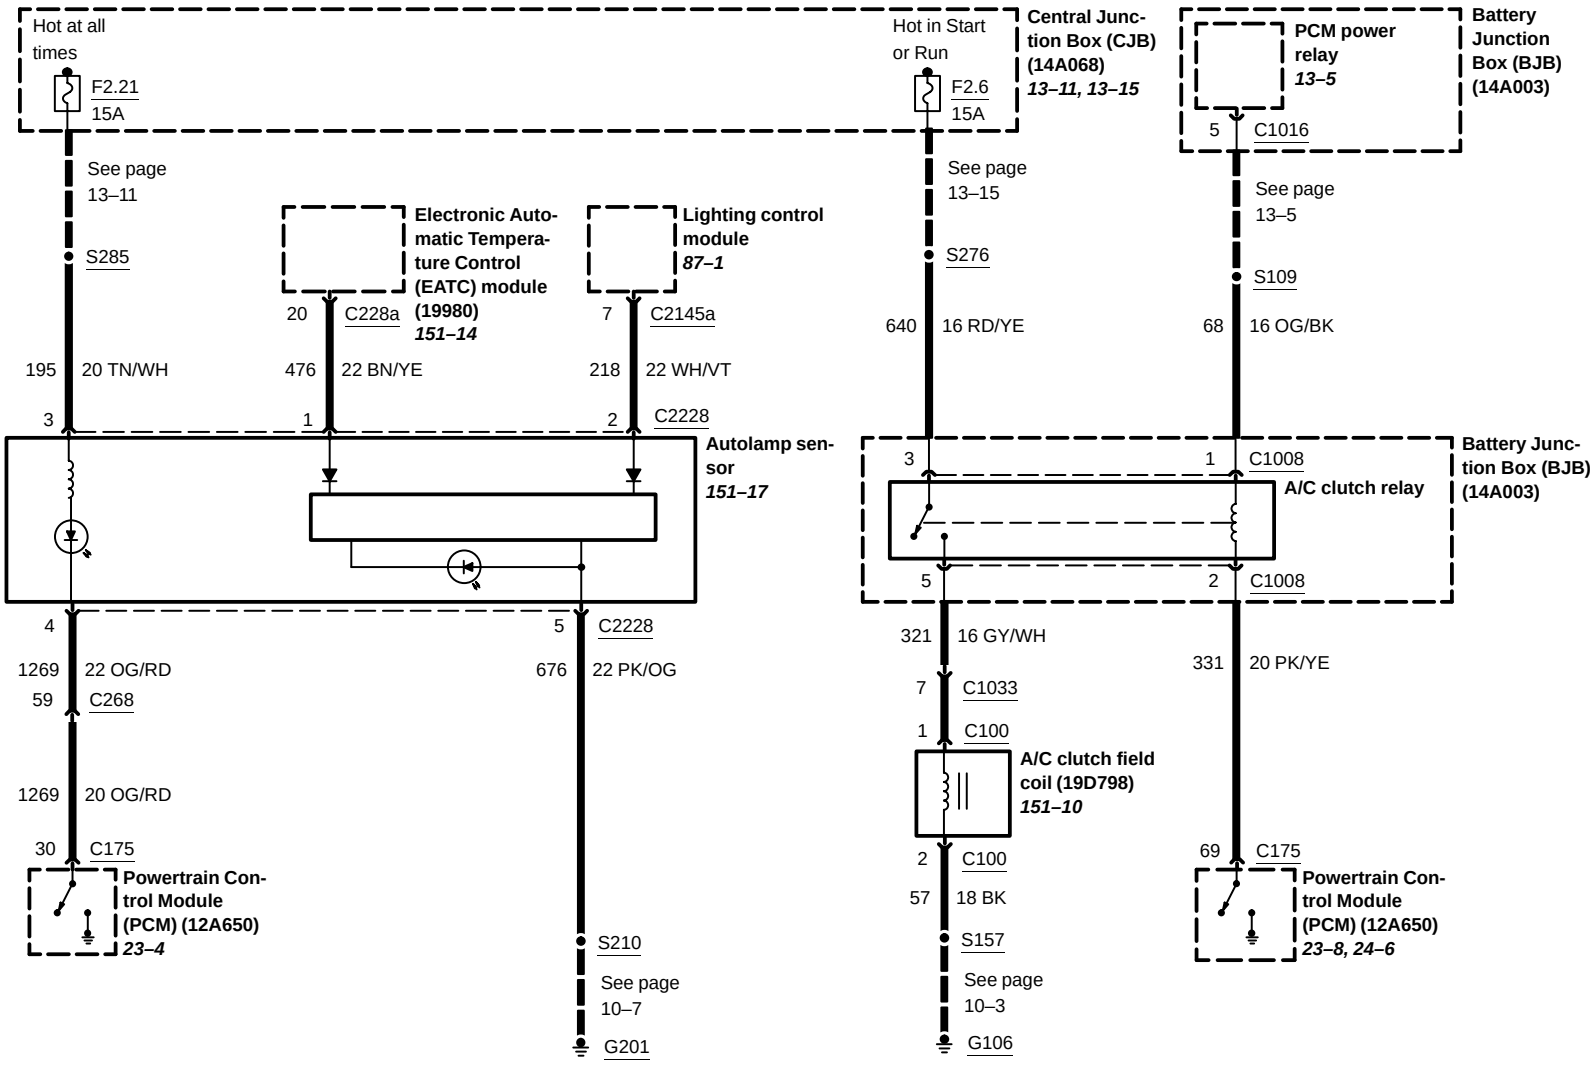
Hot at all times
F2.21
15A
Hot in Start or Run
F2.6
15A
Central Junction Box (CJB) (14A068)
13–11, 13–15
PCM power relay
13–5
Battery Junction Box (BJB) (14A003)
5
C1016
See page 13–11
See page 13–15
See page 13–5
S285
S276
S109
Electronic Automatic Temperature Control (EATC) module (19980)
151–14
Lighting control module
87–1
20
C228a
7
C2145a
640
16 RD/YE
68
16 OG/BK
195
20 TN/WH
476
22 BN/YE
218
22 WH/VT
3
1
2
C2228
Autolamp sensor
151–17
3
1
C1008
A/C clutch relay
Battery Junction Box (BJB) (14A003)
5
2
C1008
4
5
C2228
321
16 GY/WH
331
20 PK/YE
1269
22 OG/RD
676
22 PK/OG
59
C268
7
C1033
1
C100
1269
20 OG/RD
A/C clutch field coil (19D798)
151–10
30
C175
2
C100
69
C175
57
18 BK
Powertrain Control Module (PCM) (12A650)
23–4
S210
S157
Powertrain Control Module (PCM) (12A650)
23–8, 24–6
See page 10–7
See page 10–3
G201
G106