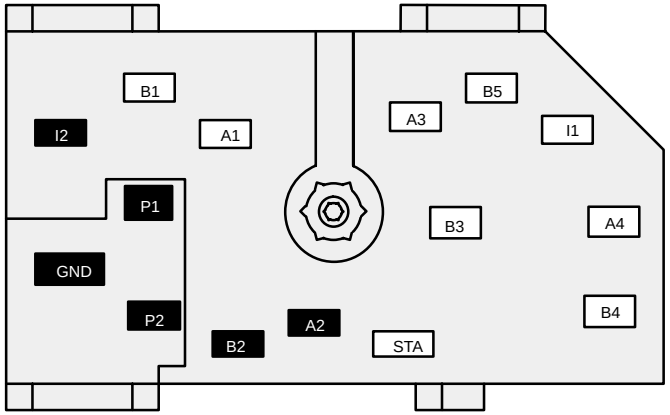

C250 (BLACK)
IGNITION SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
A1	297 (BK/LG)	Power (Hot in Acc or Run)
A2	–	NOT USED
A3	1040 (RD/BK)	Power (Hot in Run)
A4	687 (GY/YE)	Power (Hot in Run)
B1	37 (YE)	Battery Input
B2	–	NOT USED
B3	37 (YE)	Battery Input
B4	1050 (LG/VT)	Battery Input
B5	1050 (LG/VT)	Battery Input
I1	964 (DB/LG)	Power (Hot in Start or Run)
I2	–	NOT USED
P1	–	NOT USED
P2	–	NOT USED
STA	32 (RD/LB)	Power (Hot in Start)
GND	–	NOT USED