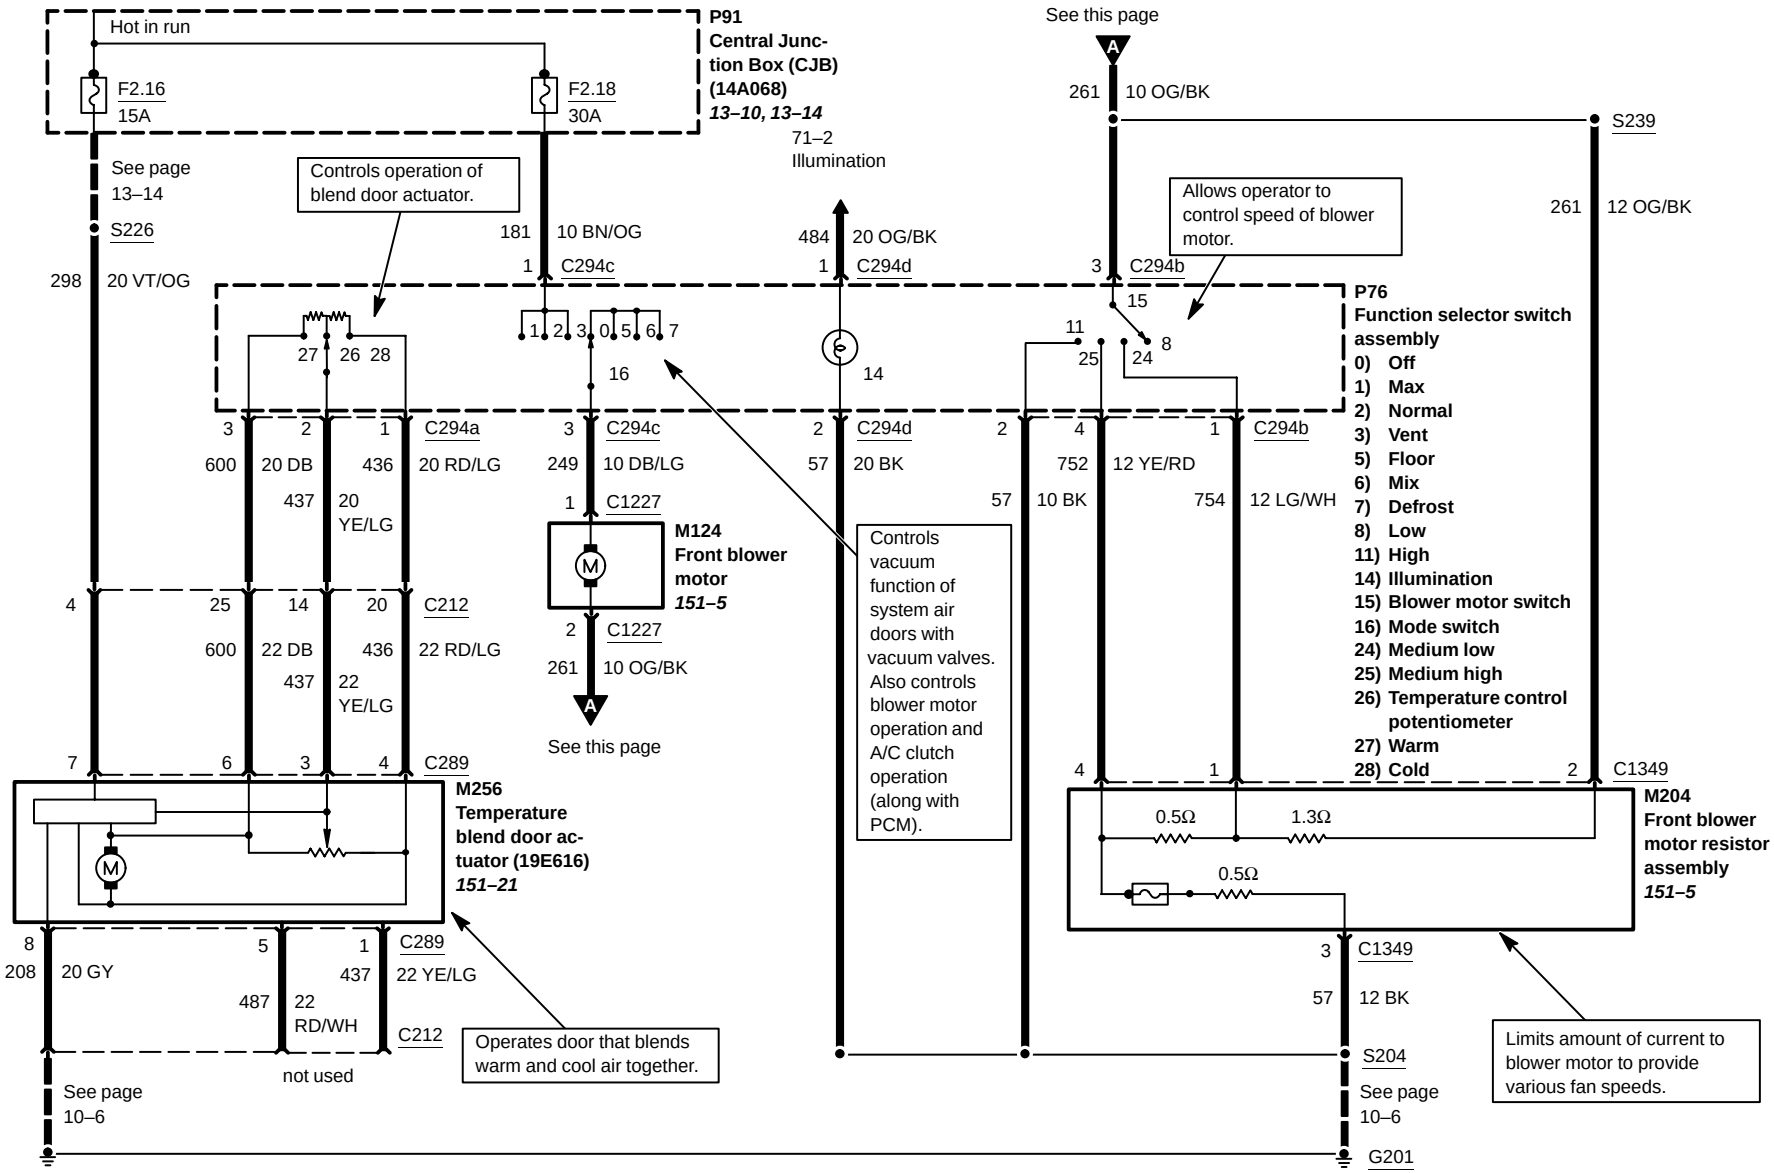
Hot in run
F2.16
15A
F2.18
30A
P91
Central Junction Box (CJB)
(14A068)
13–10, 13–14
71–2
Illumination
See page
13–14
S226
298 20 VT/OG
Controls operation of blend door actuator.
181 10 BN/OG
1 C294c
484 20 OG/BK
1 C294d
See this page
A
261 10 OG/BK
S239
261 12 OG/BK
Allows operator to control speed of blower motor.
3 C294b
15
8
11
25
24
P76
Function selector switch assembly
0) Off
1) Max
2) Normal
3) Vent
5) Floor
6) Mix
7) Defrost
8) Low
11) High
14) Illumination
15) Blower motor switch
16) Mode switch
24) Medium low
25) Medium high
26) Temperature control potentiometer
27) Warm
28) Cold
1 2 3 0 5 6 7
16
14
27 26 28
3 2 1 C294a
600 20 DB
437 20 YE/LG
436 20 RD/LG
3 C294c
249 10 DB/LG
1 C1227
M124
Front blower motor
151–5
2 C1227
261 10 OG/BK
A
See this page
2 C294d
57 20 BK
2 4 1 C294b
752 12 YE/RD
57 10 BK
754 12 LG/WH
4 25 14 20 C212
600 22 DB
437 22 YE/LG
436 22 RD/LG
Controls vacuum function of system air doors with vacuum valves. Also controls blower motor operation and A/C clutch operation (along with PCM).
7 6 3 4 C289
M256
Temperature blend door actuator (19E616)
151–21
4 1 2 C1349
M204
Front blower motor resistor assembly
151–5
0.5Ω
1.3Ω
0.5Ω
8 5 1 C289
208 20 GY
487 22 RD/WH
437 22 YE/LG
C212
not used
Operates door that blends warm and cool air together.
3 C1349
57 12 BK
S204
Limits amount of current to blower motor to provide various fan speeds.
See page
10–6
See page
10–6
G201