C904

13A625

E174
High mounted stoplamp (13A613)

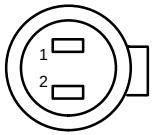

F02237

Pin	Circuit	Circuit function
1	57 (BK)	Ground
2	511 (LG)	Brake pedal position switch (13480), to stoplamps

C906

14A504

E31
Vanity mirror lamp, right (04100)

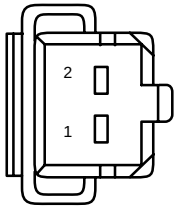

Pin	Circuit	Circuit function
1	705 (LG/OG)	Battery saver relay, switched power
2	57 (BK)	Ground

C907

14A504

E30
Vanity mirror lamp, left (04100)

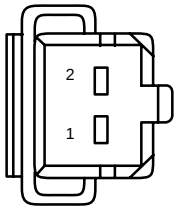

F02217

Pin	Circuit	Circuit function
1	705 (LG/OG)	Battery saver relay, switched power
2	57 (BK)	Ground

C911

17K745

A222
Electrochromatic inside mirror unit (17700)

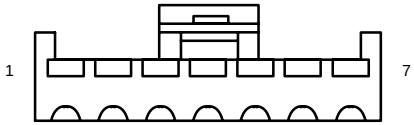

F07079

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	–	not used
4	–	not used
5	140 (BK/PK)	Voltage supplied in reverse
6	57 (BK)	Ground
7	294 (WH/LB)	Voltage in Run (overload protected)

C919

13A625



F03135

14A504

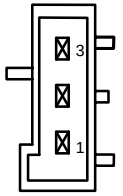

F03157

(1) 57 (BK)
(2) 53 (BK/LB)
48
(3) 511 (LG)