-3

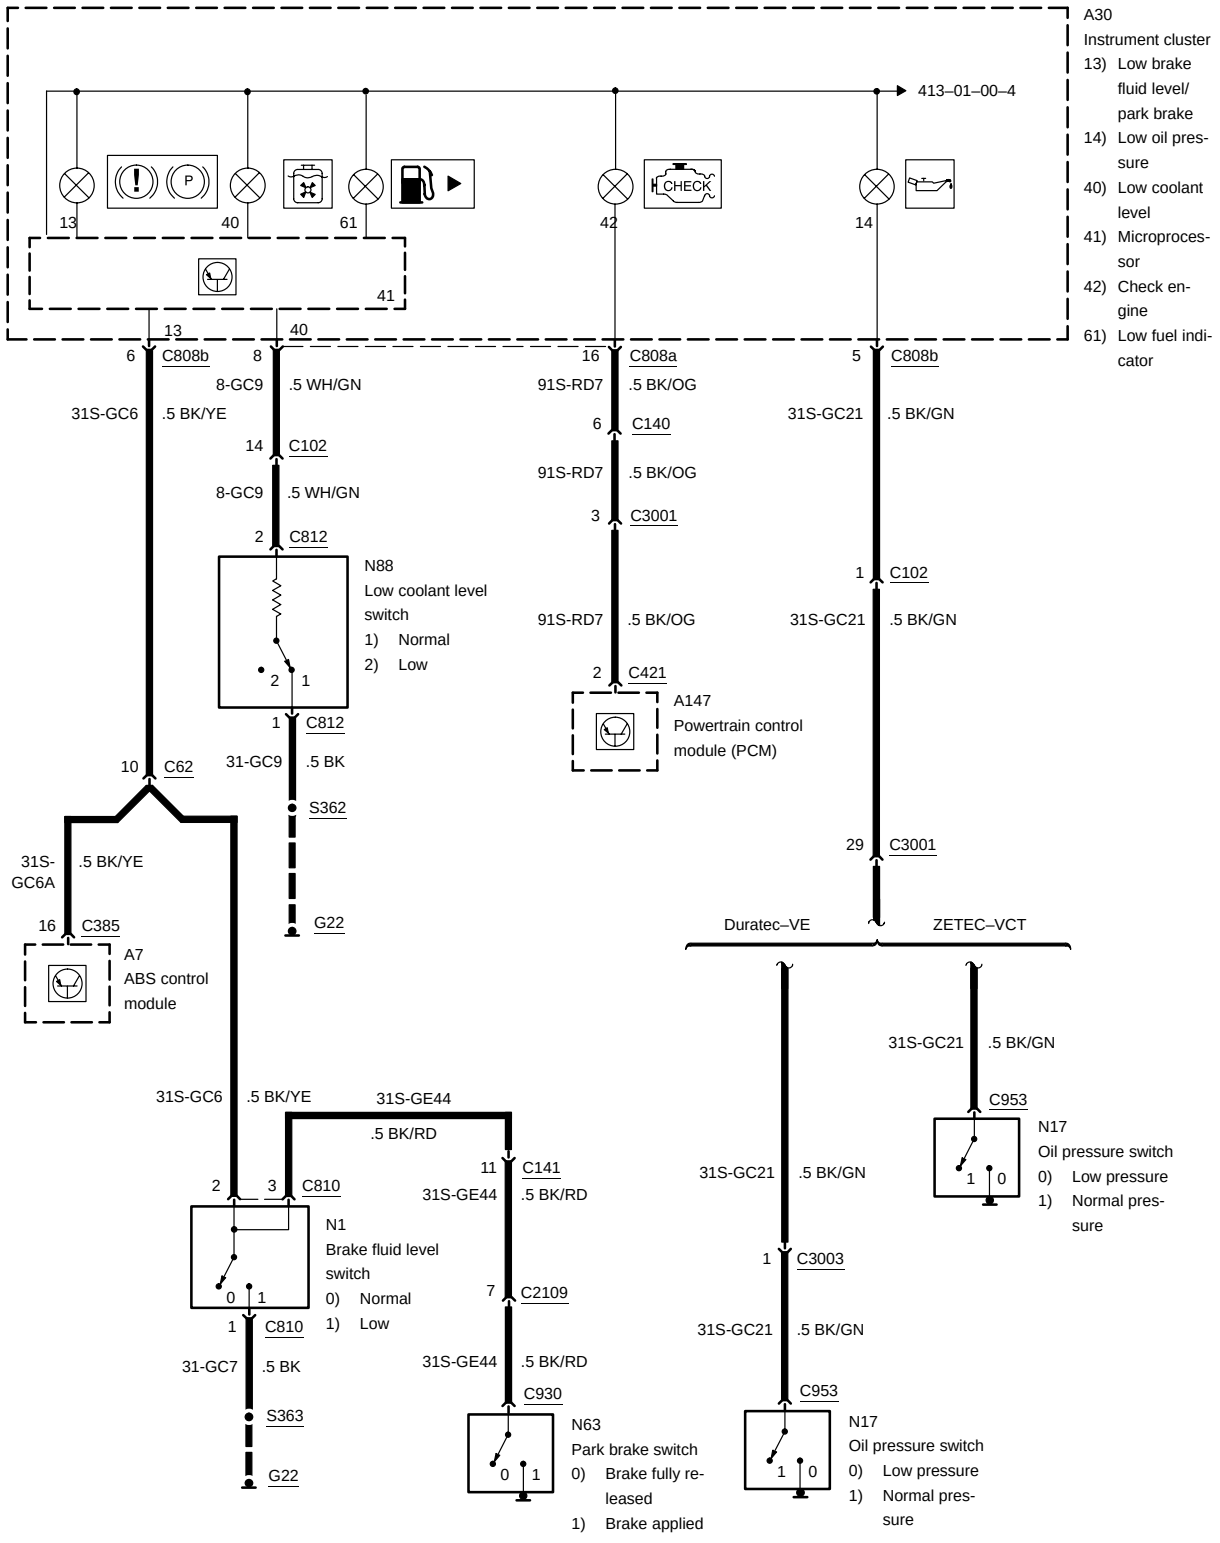
A30
Instrument cluster
13) Low brake fluid level/ park brake
14) Low oil pressure
40) Low coolant level
41) Microprocessor
42) Check engine
61) Low fuel indicator
413–01–00–4
CHECK
13
40
61
42
14
41
6 C808b
8-GC9 .5 WH/GN
31S-GC6 .5 BK/YE
14 C102
8-GC9 .5 WH/GN
2 C812
N88
Low coolant level switch
1) Normal
2) Low
1 C812
31-GC9 .5 BK
S362
G22
10 C62
31S-GC6A .5 BK/YE
16 C385
A7
ABS control module
16 C808a
91S-RD7 .5 BK/OG
6 C140
91S-RD7 .5 BK/OG
3 C3001
91S-RD7 .5 BK/OG
2 C421
A147
Powertrain control module (PCM)
5 C808b
31S-GC21 .5 BK/GN
1 C102
31S-GC21 .5 BK/GN
29 C3001
Duratec–VE
ZETEC–VCT
31S-GC21 .5 BK/GN
C953
N17
Oil pressure switch
0) Low pressure
1) Normal pressure
31S-GC21 .5 BK/GN
1 C3003
31S-GC21 .5 BK/GN
C953
N17
Oil pressure switch
0) Low pressure
1) Normal pressure
31S-GC6 .5 BK/YE
31S-GE44 .5 BK/RD
2 3 C810
N1
Brake fluid level switch
0) Normal
1) Low
1 C810
31-GC7 .5 BK
S363
G22
11 C141
31S-GE44 .5 BK/RD
7 C2109
31S-GE44 .5 BK/RD
C930
N63
Park brake switch
0) Brake fully released
1) Brake applied