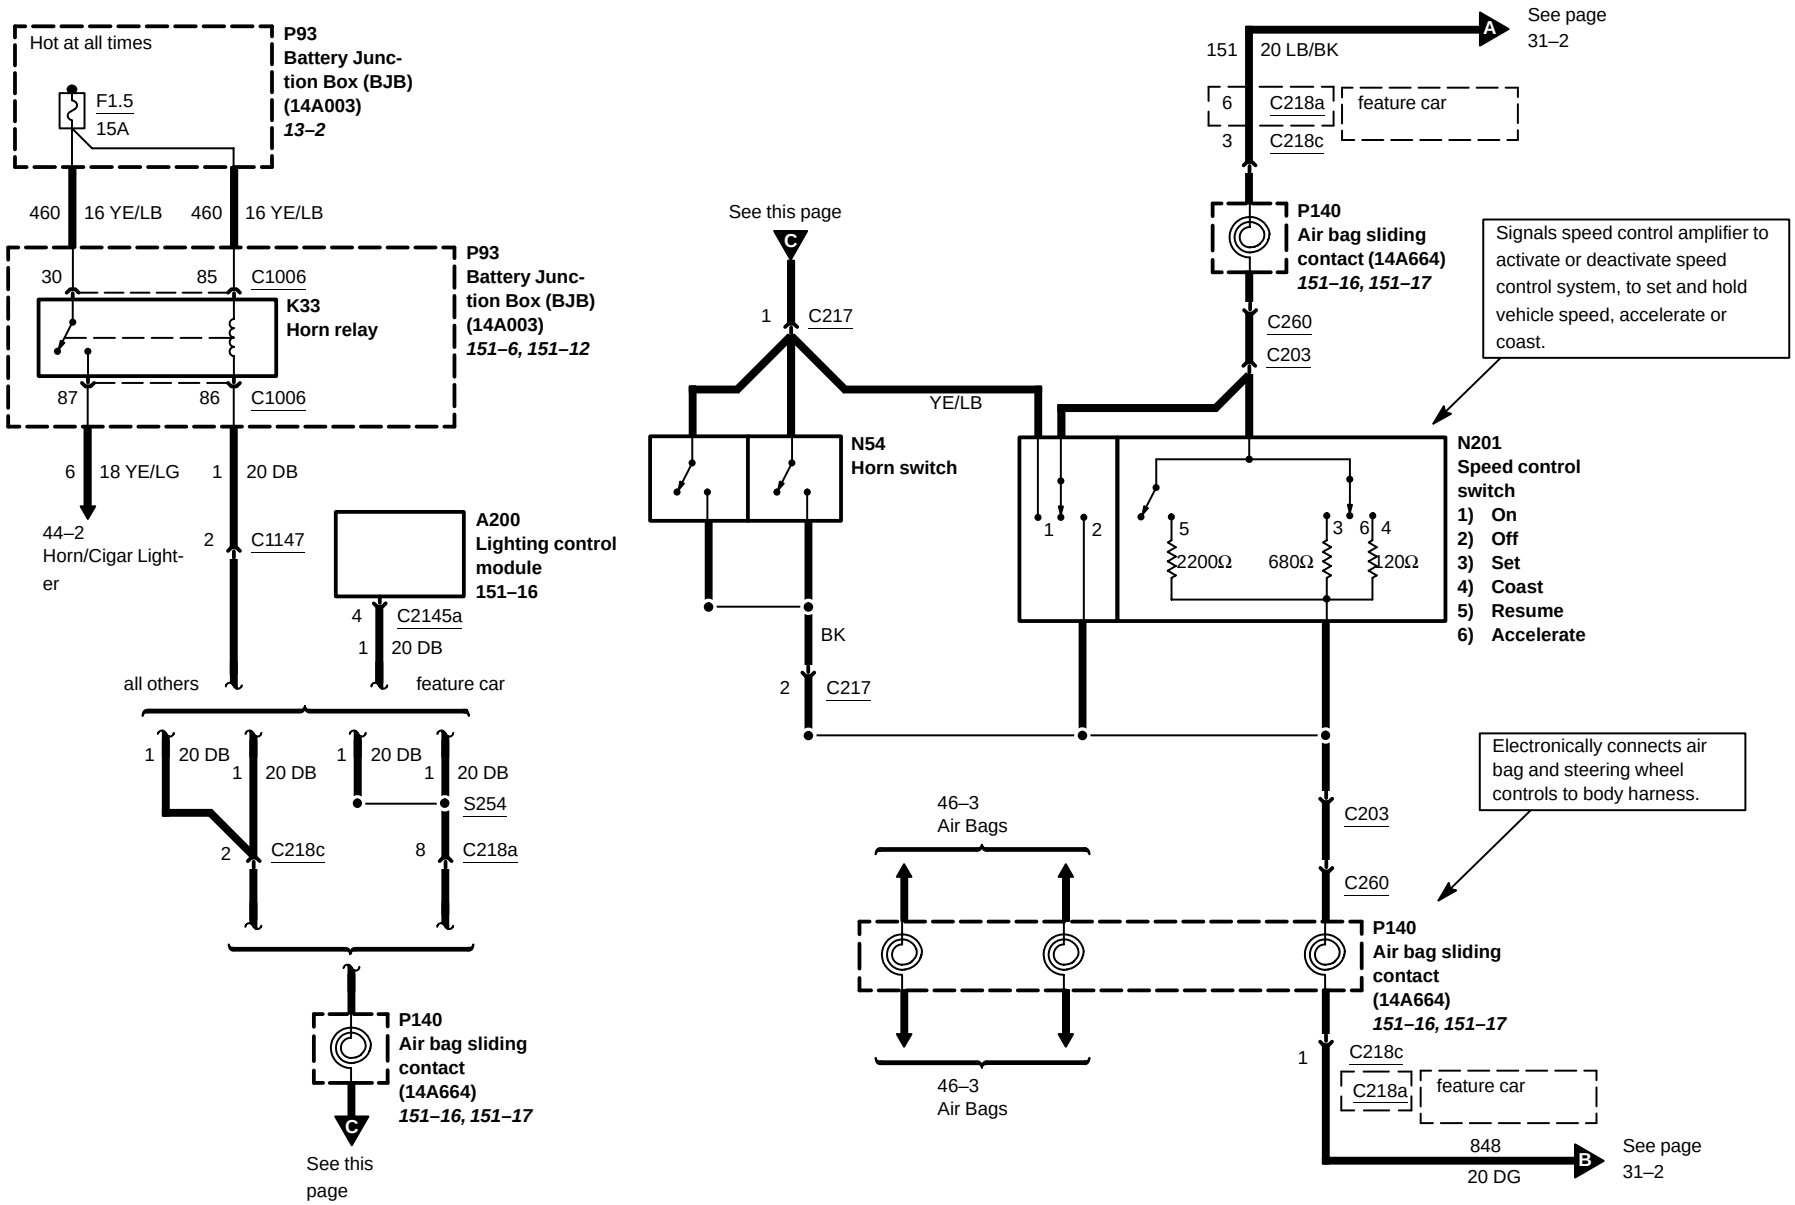
Hot at all times
P93
Battery Junction Box (BJB)
(14A003)
13–2
F1.5
15A
460
16 YE/LB
460
16 YE/LB
30
85
C1006
K33
Horn relay
P93
Battery Junction Box (BJB)
(14A003)
151–6, 151–12
87
86
C1006
6
18 YE/LG
1
20 DB
44–2
Horn/Cigar Lighter
2
C1147
A200
Lighting control module
151–16
4
C2145a
1
20 DB
all others
feature car
1
20 DB
1
20 DB
1
20 DB
1
20 DB
S254
2
C218c
8
C218a
P140
Air bag sliding contact
(14A664)
151–16, 151–17
C
See this page
See this page
C
1
C217
YE/LB
N54
Horn switch
BK
2
C217
151
20 LB/BK
A
See page 31–2
6
C218a
feature car
3
C218c
P140
Air bag sliding contact (14A664)
151–16, 151–17
C260
C203
Signals speed control amplifier to activate or deactivate speed control system, to set and hold vehicle speed, accelerate or coast.
N201
Speed control switch
1) On
2) Off
3) Set
4) Coast
5) Resume
6) Accelerate
1
2
5
2200Ω
3
680Ω
6
4
120Ω
46–3
Air Bags
46–3
Air Bags
C203
C260
Electronically connects air bag and steering wheel controls to body harness.
P140
Air bag sliding contact
(14A664)
151–16, 151–17
1
C218c
C218a
feature car
848
20 DG
B
See page 31–2