# Power Window Switch, Passenger Door

## Schematic

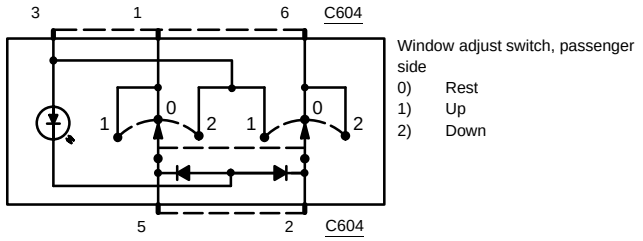


Window adjust switch, passenger side
0) Rest
1) Up
2) Down

## Terminals

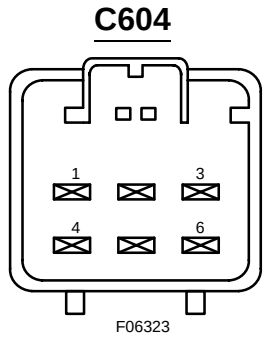


## Component testing procedure

| Circuit to test | Connect self–powered test light or ohm-meter to terminals | Move switch to these positions | A good switch will indicate |
|---|---|---|---|
| **Window adjust switches** | 3 and 2 | Up | Closed circuit |
| | 3 and 5 | Down | Closed circuit |
| | 1 and 5<br>6 and 2 | Rest | Closed circuit |