C755

9H589

Y13
Idle speed control valve

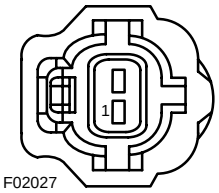

F02027

Pin	Circuit	Circuit Function
1	15-RL9 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
2	31S-RL9 (BK/YE)	Ground, switched

C756

9H589

Y13
Idle speed control valve

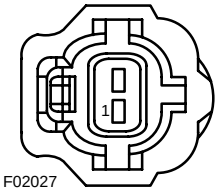

F02027

Pin	Circuit	Circuit Function
1	15-RL9 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
2	31S-RL9 (BK/YE)	Ground, switched

C761

14B732

M158
Driver seat height motor

M159
Passenger seat height motor

F02130



Pin	Circuit	Circuit Function
1	32-AH10 (WH/BK)	Switched between: Battery voltage, Ground or Open
2	33-AH10 (YE/BK)	Switched between: Battery voltage, Ground or Open

C771

9H589

Y108
Injector 1

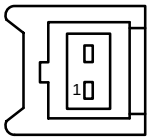

F02012

Pin	Circuit	Circuit Function
1	15-RL10 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)
2	31S-RL10 (BK/WH)	Ground, switched

C772

9H589

Y109
Injector 2

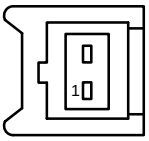

F02012

Pin	Circuit	Circuit Function
1	15-RL11 (GN/YE)	Voltage, ignition switch in Start or Run (not overload protected)
2	31S-RL11 (BK/YE)	Ground, switched

C773

9H589

Y110
Injector 3

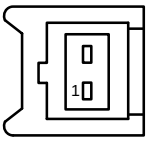

F02012

Pin	Circuit	Circuit Function
1	15-RL12 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	31S-RL12 (BK/BU)	Ground, switched

C774

9H589

Y111
Injector 4

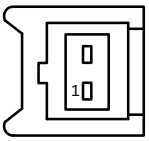

F02012

Pin	Circuit	Circuit Function
1	15-RL13 (GN/RD)	Voltage, ignition switch in Start or Run (not overload protected)
2	31S-RL13 (BK/OG)	Ground, switched

C775

9H589

Y108
Injector 1



F02058

Pin	Circuit	Circuit Function
1	31S-RL10 (BK/WH)	Ground, switched
2	15-RL10 (GN/WH)	Voltage, ignition switch in Start or Run (not overload protected)