C289 (WT)

18B574

Temperature blend door actuator (19E616)

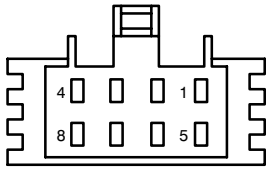

F08059

Pin	Circuit	Circuit function
1	–	not used
2	–	not used
3	687 (GY/YE)	Temperature, position sense, input
4	–	not used
5	–	not used
6	–	not used
7	1040 (RD/BK)	Voltage in Run (overload protected)
8	1205 (BK)	Ground

C290a (BK)

14401/14588

Radio (18806)

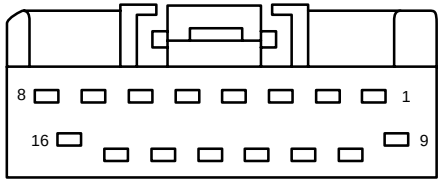

F16071

Pin	Circuit	Circuit function
1	1418 (LB/WH)	Illumination
2	1205 (BK)	Ground, Illumination
3	1000 (RD/BK)	Voltage supplied in Start (overload protected)
4	–	not used
5	802 (OG/RD)	Speaker, right rear (18808) +
6	803 (BN/PK)	Speaker, right rear (18808) –
7	805 (WH/LG)	Speaker, right front (18808) +
8	811 (DG/OG)	Speaker, right front (18808) –
9	797 (LG/VT)	Voltage supplied at all times (overload protected)
10	194 (PK)	Voltage in Run or Accessory (overload protected)
11	694 (BK/LG)	Ground, Radio
	–	not used
12	800 (GY/LB)	Speaker, left rear (18808) +
13	801 (TN/YE)	Speaker, left rear (18808) –
14	804 (OG/LG)	Speaker, left front (18808) +
15	813 (LB/WH)	Speaker, left front (18808) –
16	694 (BK/LG)	Ground