C1274 (WH)

7C078

4R70W transmission

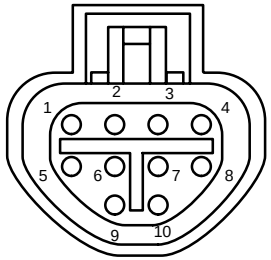

F10093

Pin	Circuit	Circuit function
1	–	not used
2	359 (GY/RD)	signal, return
3	480 (VT/YE)	Torque Converter Clutch (TCC) solenoid
4	361 (RD)	Voltage supplied in Start and Run (overload protected)
5	923 (OG/BK)	Transmission Fluid Temperature (TFT) sensor, input
6	925 (WH/YE)	Injector pressure sensor, input
7	237 (OG/YE)	Shift solenoid A
8	315 (VT/OG)	Shift solenoid B
9	–	not used
10	–	not used

C1275 (GY)

1807463C91

Camshaft position sensor (6B288)

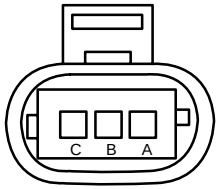

Pin	Circuit	Circuit function
A	796 (LB)	Camshaft position sensor (6B288), signal, return
B	351 (BN/WH)	Reference, voltage
C	795 (DG)	Camshaft position sensor (6B288), to, Powertrain Control Module (PCM) (12A650)

C1276 (BK)

1807463C91

Engine Coolant Temperature (ECT) sender

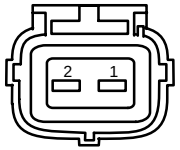

F02099

Pin	Circuit	Circuit function
1	45 (YE/RD)	Ground
2	39 (RD/WH)	Engine Coolant Temperature (ECT) sender, input

C1278 (GY)

2B516

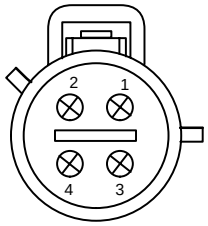

F04269

(1) 514 (YE/RD)
(2) 516 (YE/BK)

14406

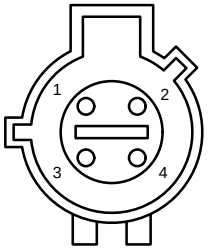

F04075

(3) 522 (TN/BK)
(4) 521 (TN/OG)

C1279 (BU)

9K499

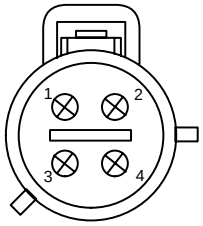

F04263

(1) 361 (RD)
(2) 389 (WH/BK)

14406

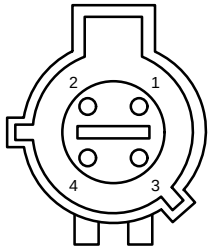

F04082

(3) 359 (GY/RD)
(4) 392 (RD/LG)