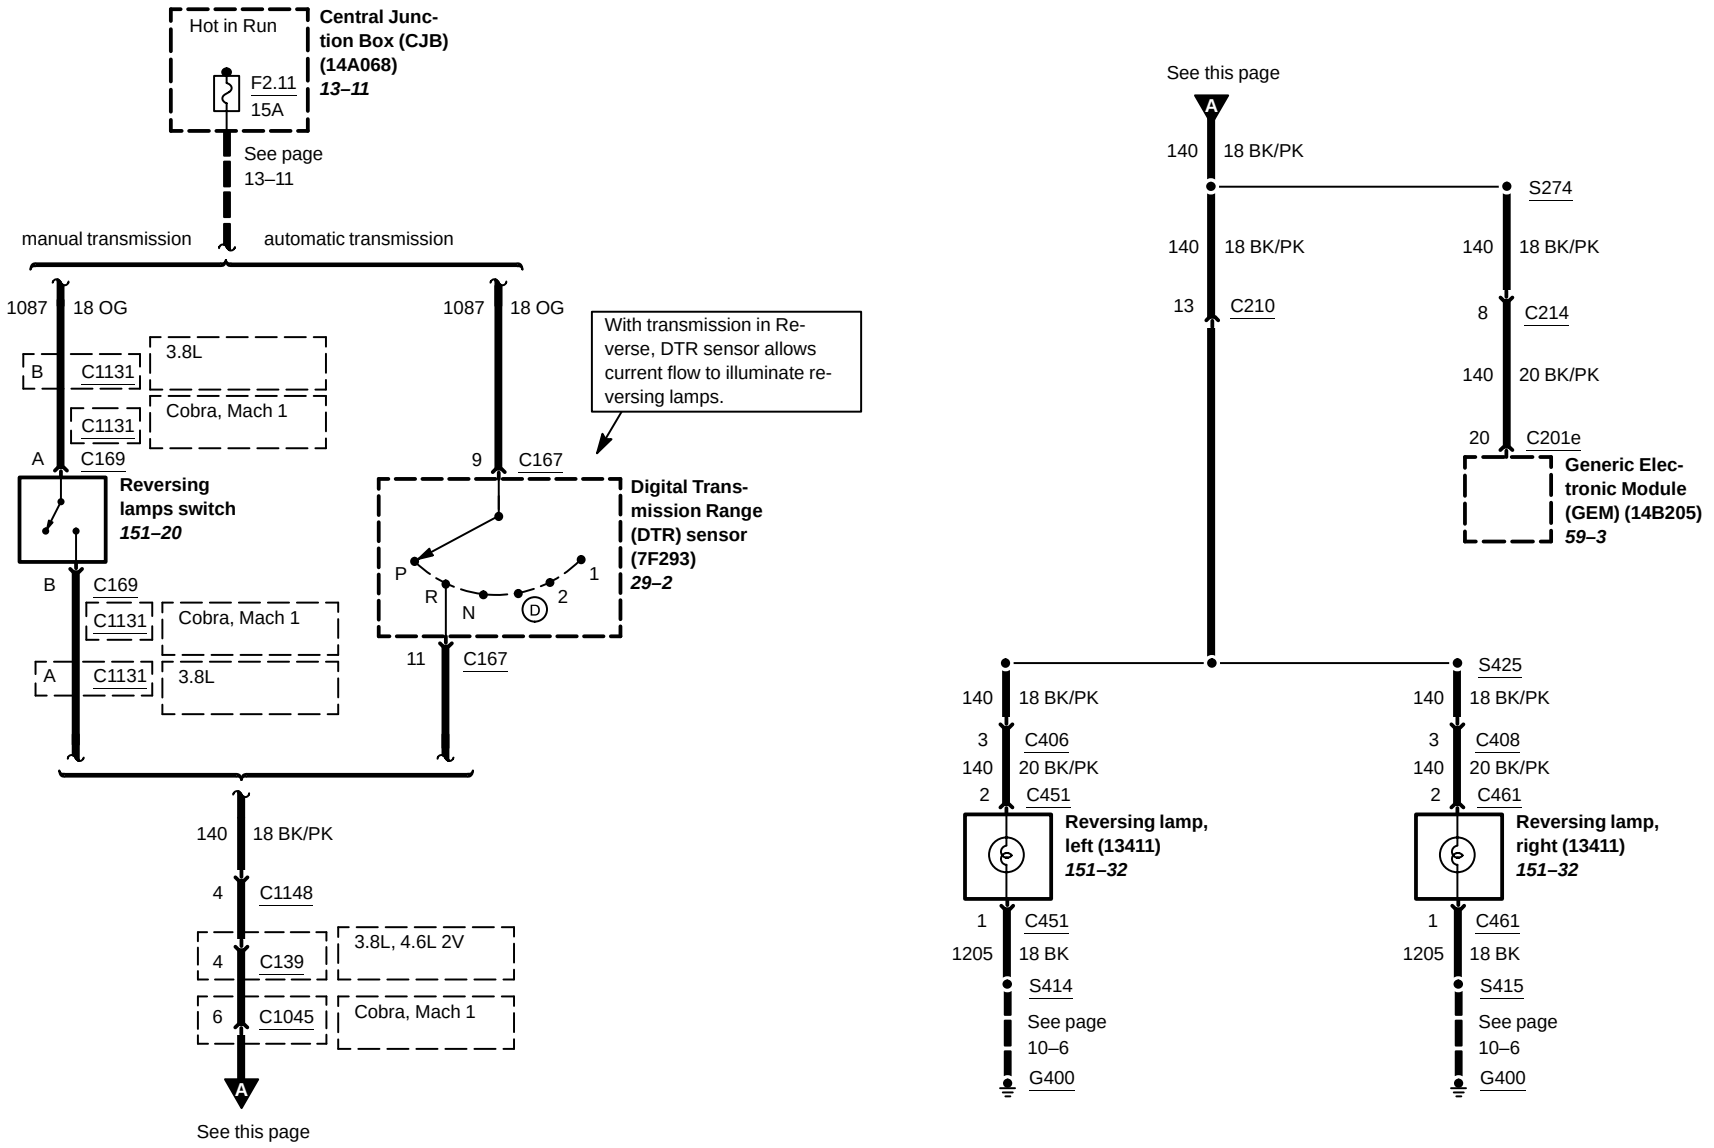
Hot in Run
F2.11
15A
Central Junction Box (CJB) (14A068)
13–11
See page 13–11
manual transmission
automatic transmission
1087 18 OG
1087 18 OG
With transmission in Reverse, DTR sensor allows current flow to illuminate reversing lamps.
B C1131
3.8L
C1131
Cobra, Mach 1
A C169
Reversing lamps switch
151–20
9 C167
Digital Transmission Range (DTR) sensor (7F293)
29–2
P R N D 1 2
B C169
C1131
Cobra, Mach 1
A C1131
3.8L
11 C167
140 18 BK/PK
4 C1148
4 C139
3.8L, 4.6L 2V
6 C1045
Cobra, Mach 1
A
See this page
See this page
A
140 18 BK/PK
140 18 BK/PK
13 C210
S274
140 18 BK/PK
8 C214
140 20 BK/PK
20 C201e
Generic Electronic Module (GEM) (14B205)
59–3
140 18 BK/PK
3 C406
140 20 BK/PK
2 C451
Reversing lamp, left (13411)
151–32
1 C451
1205 18 BK
S414
See page 10–6
G400
S425
140 18 BK/PK
3 C408
140 20 BK/PK
2 C461
Reversing lamp, right (13411)
151–32
1 C461
1205 18 BK
S415
See page 10–6
G400